



Cyclades[®] PM IPDU

Installer/Administrator/User Guide



FCC Warning Statement

The Cyclades PM IPDU has been tested and found to comply with the limits for Class A digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Installation & Service Manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user is required to correct the problem at his or her own expense.

Canadian DOC Notice

The Cyclades PM IPDU does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le Cyclades PM n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.



Cyclades[®] PM IPDU

Installer/Administrator/User Guide

Avocent, the Avocent logo, The Power of Being There and Cyclades are registered trademarks of Avocent Corporation. All other marks are the property of their respective owners.

© 2006 Avocent Corporation. All rights reserved. 590-667-501A

**Instructions**

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**Dangerous Voltage**

This symbol is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**Power On**

This symbol indicates the principal on/off switch is in the on position.

**Power Off**

This symbol indicates the principal on/off switch is in the off position.

**Protective Grounding Terminal**

This symbol indicates a terminal which must be connected to earth ground prior to making any other connections to the equipment.

TABLE OF CONTENTS

List of Figures	vii
List of Tables	ix
Chapter 1: Introduction	1
<i>Features and Benefits</i>	<i>1</i>
<i>Alarms and monitoring.....</i>	<i>1</i>
<i>Sequential power up</i>	<i>1</i>
<i>Support for daisy chaining</i>	<i>2</i>
<i>Creation of user accounts.....</i>	<i>2</i>
<i>Integration with Cyclades management products</i>	<i>2</i>
<i>Hardware Configuration Options.....</i>	<i>2</i>
<i>Standalone configuration</i>	<i>2</i>
<i>Daisy chained configuration.....</i>	<i>3</i>
<i>Integrated configuration.....</i>	<i>4</i>
<i>Accessing the System Console</i>	<i>6</i>
<i>Direct console access</i>	<i>6</i>
<i>Console access through a management device</i>	<i>6</i>
<i>Component Overview.....</i>	<i>7</i>
<i>Cyclades PM8 IPDU</i>	<i>7</i>
<i>Cyclades PM8i IPDU</i>	<i>8</i>
<i>Cyclades PM10 IPDU</i>	<i>8</i>
<i>Cyclades PM10i IPDU</i>	<i>9</i>
<i>Cyclades PM10i-L30A IPDU</i>	<i>9</i>
<i>Cyclades PM10i-32A IPDU</i>	<i>9</i>
<i>Cyclades PM10i-32Au IPDU</i>	<i>10</i>
<i>Cyclades PM20 IPDU</i>	<i>10</i>
<i>Cyclades PM20i IPDU</i>	<i>10</i>
<i>Cyclades PM20i-32A IPDU</i>	<i>11</i>
<i>Cyclades PM20i-32Au IPDU</i>	<i>11</i>
Chapter 2: Installation	13
<i>Getting Started</i>	<i>13</i>

<i>Supplied with the PM IPDU</i>	<i>13</i>
<i>Modular input power cables for the PM IPDU</i>	<i>14</i>
<i>Optional outlet cable package</i>	<i>16</i>
<i>Rack Mounting the Cyclades PM IPDU</i>	<i>16</i>
<i>Installation environment.....</i>	<i>17</i>
<i>Daisy Chaining PM IPDUs</i>	<i>19</i>
<i>Plugging Devices Into PM IPDU Outlets.....</i>	<i>20</i>
<i>Powering Up the PM IPDU.....</i>	<i>20</i>
<i>Making a Direct Connection for Console Access</i>	<i>20</i>
Chapter 3: Configuration.....	23
<i>Default Configuration Parameters</i>	<i>23</i>
<i>Initial Configuration Using the Command Prompt.....</i>	<i>24</i>
<i>Resetting the Admin Password</i>	<i>25</i>
<i>Upgrading the Cyclades PM IPDU Firmware</i>	<i>26</i>
Chapter 4: Command Line Interface	31
<i>PM IPDU User Interface.....</i>	<i>31</i>
<i>Daisy chained PM IPDUs in the login prompt.....</i>	<i>31</i>
<i>Logging in to the PM IPDU.....</i>	<i>32</i>
<i>Commands</i>	<i>32</i>
<i>adduser.....</i>	<i>33</i>
<i>alarm.....</i>	<i>34</i>
<i>assign</i>	<i>34</i>
<i>buzzer</i>	<i>35</i>
<i>current.....</i>	<i>35</i>
<i>currentprotection</i>	<i>36</i>
<i>currseg</i>	<i>37</i>
<i>cycle</i>	<i>38</i>
<i>dbsync</i>	<i>39</i>
<i>deluser.....</i>	<i>39</i>
<i>display.....</i>	<i>40</i>
<i>exit.....</i>	<i>41</i>
<i>factory_defaults</i>	<i>41</i>
<i>help.....</i>	<i>42</i>
<i>humidity</i>	<i>43</i>

hwocp 44

id 45

interval 46

list..... 47

lock..... 48

name..... 48

off 49

on 50

passwd..... 50

reboot..... 51

restore 53

save 53

status 54

syslog 55

temperature 56

unassign 57

unlock..... 57

upgrade 58

ver 59

voltage..... 60

whoami..... 61

Appendices..... 63

Appendix A: Specifications 63

Appendix B: Safety Instructions..... 73

Appendix C: Circuit Breakers..... 79

Index..... 85

LIST OF FIGURES

<i>Figure 1.1: Standalone Configuration.....</i>	<i>3</i>
<i>Figure 1.2: Daisy Chained Configuration.....</i>	<i>4</i>
<i>Figure 1.3: The Cyclades PM IPDU with a Cyclades Management Device.....</i>	<i>5</i>
<i>Figure 1.4: Cyclades PM8 IPDU</i>	<i>7</i>
<i>Figure 1.5: Cyclades PM8i IPDU</i>	<i>8</i>
<i>Figure 1.6: Cyclades PM10 IPDU</i>	<i>8</i>
<i>Figure 1.7: Back of the Cyclades PM10iIPDU</i>	<i>9</i>
<i>Figure 1.8: Front of the Cyclades PM10iIPDU.....</i>	<i>9</i>
<i>Figure 1.9: The Cyclades PM20 IPDU</i>	<i>10</i>
<i>Figure 1.10: The Cyclades PM20i IPDU, PM20i-32A IPDU and PM20i-32AU IPDU.....</i>	<i>11</i>
<i>Figure 2.1: Rack Mounting a Cyclades PM10 IPDU, PM10l IPDU and PM8iIPDU.....</i>	<i>17</i>
<i>Figure 2.2: Rack Mounting Holes on the PM8i IPDU, PM10 IPDU and PM10i IPDU</i>	<i>18</i>
<i>Figure 2.3: PM10 IPDU with Mounting Brackets Installed</i>	<i>18</i>
<i>Figure 2.4: Rack Mount for the Cyclades PM8i IPDU, PM10 IPDU or PM10i IPDU.....</i>	<i>19</i>
<i>Figure 2.5: Connecting a Local Work Station to the Cyclades PM IPDU.....</i>	<i>21</i>
<i>Figure 3.1: Sending Firmware using HyperTerminal</i>	<i>28</i>
<i>Figure 3.2: Sending Firmware using Minicom</i>	<i>29</i>
<i>Figure C.1: PM10-L30A IPDU Circuit Breakers</i>	<i>80</i>
<i>Figure C.2: PM10i-L30A IPDU Circuit Breakers</i>	<i>80</i>
<i>Figure C.3: PM20-L30A IPDU Circuit Breakers</i>	<i>81</i>
<i>Figure C.4: PM20i-L30A IPDU, PM20i-32A IPDU and PM20i-32Au IPDU Circuit Breakers....</i>	<i>82</i>

LIST OF TABLES

<i>Table 2.1: PM IPDU Shipping Box Contents, Part Numbers and Description.....</i>	<i>13</i>
<i>Table 2.2: PM8i-10A IPDU and PM10i-10A IPDU Power Cables</i>	<i>15</i>
<i>Table 2.3: PM10i-15A IPDU Power Cables</i>	<i>16</i>
<i>Table 2.4: PM10i-16A IPDU and PM 20i-16A IPDU Power Cables</i>	<i>16</i>
<i>Table 2.5: PM10i-20A IPDU and PM 20i-20A IPDU Power Cables</i>	<i>16</i>
<i>Table 2.6: PM IPDU Optimum Installation Environment.....</i>	<i>17</i>
<i>Table 4.1: User Commands</i>	<i>32</i>
<i>Table 4.2: Admin User (privileged) Commands.....</i>	<i>33</i>
<i>Table A.1: PM8-15A IPDU Specifications</i>	<i>63</i>
<i>Table A.2: PM8-20A IPDU and PM8-L20A IPDU Specifications.....</i>	<i>64</i>
<i>Table A.3: PM8i-10A IPDU Specifications.....</i>	<i>64</i>
<i>Table A.4: PM10-15A IPDU Specifications</i>	<i>65</i>
<i>Table A.5: PM10-20A IPDU and PM10-L20A IPDU Specifications.....</i>	<i>65</i>
<i>Table A.6: PM10-L30A IPDU Specifications.....</i>	<i>66</i>
<i>Table A.7: PM10i-10A IPDU Specifications.....</i>	<i>66</i>
<i>Table A.8: PM10i-15A IPDU Specifications.....</i>	<i>67</i>
<i>Table A.9: PM10i-16A IPDU Specifications.....</i>	<i>67</i>
<i>Table A.10: PM10i-20A IPDU Specifications.....</i>	<i>68</i>
<i>Table A.11: PM10i-32A IPDU and PM10i-32Au IPDU Specifications.....</i>	<i>68</i>
<i>Table A.12: PM10i-L30A IPDU Specifications.....</i>	<i>69</i>
<i>Table A.13: PM20-20A IPDU and PM20-L20A IPDU Specifications.....</i>	<i>69</i>
<i>Table A.14: PM20-L30A IPDU Specifications.....</i>	<i>70</i>
<i>Table A.15: PM20i-16A IPDU Specifications</i>	<i>70</i>
<i>Table A.16: PM20i-20A IPDU and PM20i-L20A IPDU Electrical Specifications.....</i>	<i>71</i>
<i>Table A.17: PM20i-L30A Specifications</i>	<i>71</i>
<i>Table A.18: PM20i-32A IPDU and PM20i-32Au IPDU Specifications.....</i>	<i>72</i>

<i>Table A.19: Pinouts for IN and OUT RS-232 Serial Ports</i>	72
<i>Table C.1: Circuit Breaker Trip Time</i>	83

CHAPTER**1*****Introduction***

This installation, administration and user's guide provides background information and procedures for installing, configuring and maintaining the Cyclades® Power Management (PM) Intelligent Power Distribution Unit (IPDU) family.

This guide offers procedures for a stand-alone configuration. If you are integrating your PM IPDU with a Cyclades KVM or console management device, please see the related installation instructions for that product.

The Cyclades PM IPDU enables remote power control of servers and network gear. When used in conjunction with Cyclades console servers or KVM devices, the Cyclades PM IPDU delivers easier management capabilities and faster problem solving by integrating console/KVM access and power control into one single interface.

The following sections describe general features common to all PM IPDU models in addition to pointing out specific features of certain units.

Features and Benefits

The following sections describe common features among all Cyclades PM IPDU units.

Alarms and monitoring

The Cyclades PM IPDU delivers accurate, real-time global current monitoring of all connected devices via the user interface screen or locally through an LED digital display. Users have the ability to set a current alarm threshold that, once exceeded, will cause the Cyclades PM IPDU to sound an alarm or send a notification message, or both. The LED current display also blinks when the alarm threshold is exceeded.

Sequential power up

The Cyclades PM IPDU incorporates a sequential power up feature that prevents all power outlet receptacles from turning on at once, eliminating the potential of current surges that could render the equipment inoperable. Together with the global current monitoring, the sequential power up feature lets users safely install more equipment on existing power circuits without the worry of current overloads.

Support for daisy chaining

The IPDU has a fixed number of power outlet receptacles, but with daisy chaining capabilities, users may increase capacity by connecting the control interfaces of several Cyclades PM IPDUs in a series.

Creation of user accounts

The Cyclades PM IPDU allows one administrator and up to eight users (not simultaneously) to connect to it through its RS-232 serial port. After a successful authentication, it performs the following functions:

- Reads and displays the total current being used by the entire Cyclades PM IPDU
- Manages power outlets (by powering them up and down, locking and unlocking them and/or power cycling them)
- Manages users
- Monitors power variables
- Can be used independently of any other hardware and controlled by any simple terminal access program like Minicom on Linux or HyperTerminal on Microsoft operating systems

Integration with Cyclades management products

When used with the ACS advanced console server, the TS terminal server, the OnSite branch office appliance or the KVM switch, the Cyclades PM IPDU offers a superior feature set that is not fully covered in this manual. Please refer to the appropriate product documentation for more information on how to use the Cyclades PM IPDU with your specific implementation.

Hardware Configuration Options

The Cyclades PM IPDU may be used in one of three hardware configurations:

- Standalone – Managed independently of any other hardware device.
- See *Standalone configuration* on page 2.
- Daisy chained - Multiple slave PM IPDUs connected to one another and managed by one master PM IPDU. See *Daisy chained configuration* on page 3.
- Integrated – Managed by a Cyclades TS terminal server, Cyclades ACS advanced console server, Cyclades OnSite branch office appliance, one of the Cyclades KVM switch products or by any other console/terminal management device. See *Integrated configuration* on page 4.

Standalone configuration

In a standalone configuration, the Cyclades PM IPDU operates independently of any other hardware such as the TS terminal server or ACS console server. The following graphic displays a PM IPDU with the console port connected to a computer running HyperTerminal, Kermit, or Minicom.

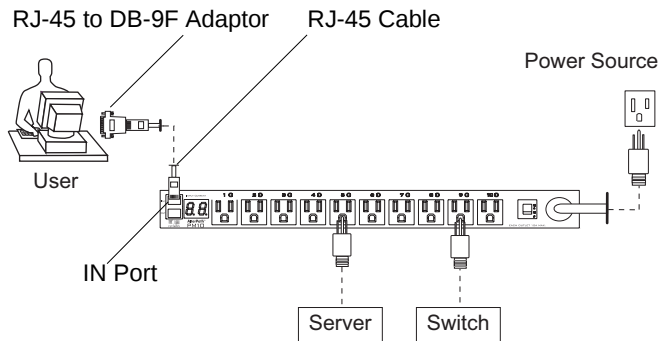


Figure 1.1: Standalone Configuration

NOTE: The previous graphic displays the PM IPDU being connected to the local work station with the RJ-45 to DB-9F adaptor that is shipped with the product. If your work station does not have a DB-9M COM port, you may need to use a USB serial adaptor in order to connect to the computer's USB port.

For specific installation instructions, see *Rack Mounting the Cyclades PM IPDU* on page 16.

Daisy chained configuration

In a daisy chained configuration, multiple slave PM IPDUs are connected to one another and managed by a single master PM IPDU. The PMs are linked together with RJ-45 cables connected to one PM IPDU's OUT port and the other PM IPDU's IN port. This example shows four Cyclades PM IPDUs operating in a daisy chained environment. PM IPDU #1 is connected to the local workstation and is the "master" PM IPDU, while the other three PM IPDUs are "slaves."

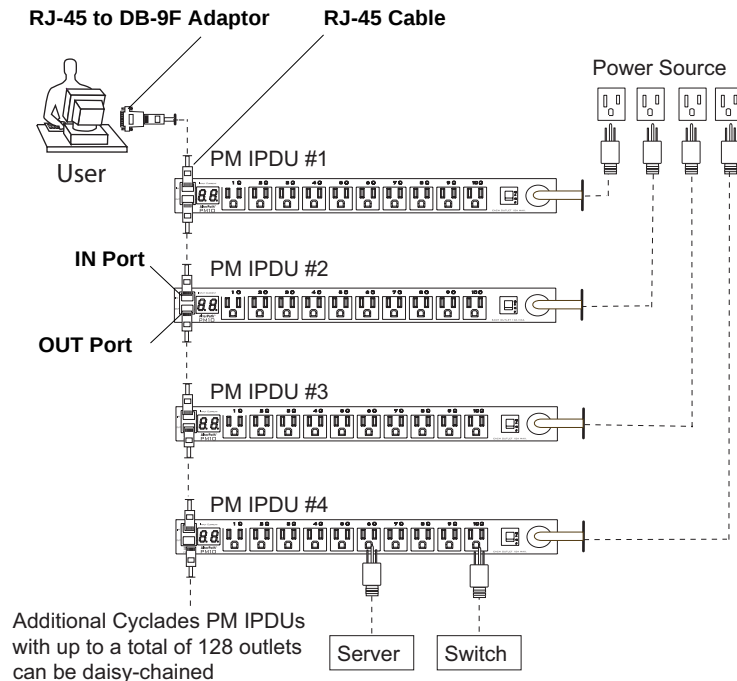


Figure 1.2: Daisy Chained Configuration

NOTE: The previous graphic displays the PM IPDU being connected to the local work station with the RJ-45 to DB-9F adaptor that is shipped with the product. If your work station does not have a DB-9M COM port, you may need to use a USB serial adaptor in order to connect to the computer's USB port.

The PM IPDUs in the previous graphic are configured to be used independently of any other hardware such as the Cyclades ACS console server or Cyclades-TS terminal server.

Integrated configuration

In an integrated configuration, the Cyclades PM IPDU is configured to work in conjunction with one of the following Cyclades management products:

- Cyclades-TS terminal server
- Cyclades ACS console server
- Cyclades OnSite appliance
- Cyclades KVM switch family

A user connects to the Cyclades PM IPDU by accessing the appropriate console port of the Cyclades management product. In this scenario, software configuration on and monitoring of the Cyclades PM IPDU is done through the Cyclades management product and not on the PM IPDU

itself. Visit <http://www.cyclades.com/support/downloads.php> to find setup and configuration instructions for the Cyclades management products.

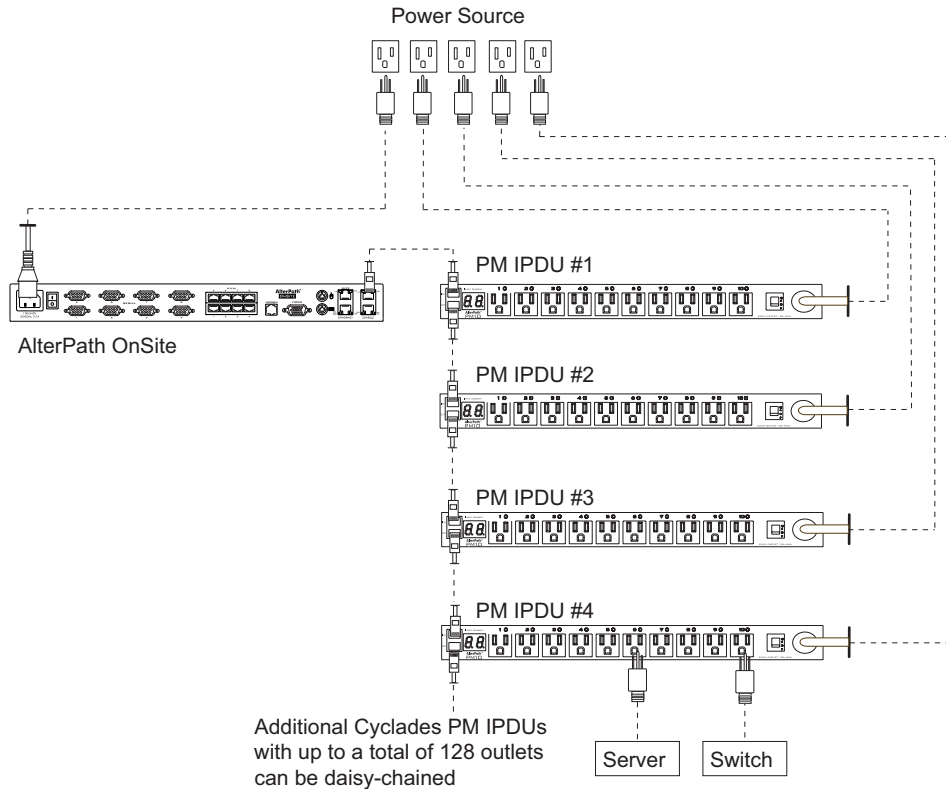


Figure 1.3: The Cyclades PM IPDU with a Cyclades Management Device

An integrated environment offers the following advantages:

- IT professionals may power down, power up, and reboot network devices using the same console management session from any location via telnet, Secure Shell (SSHv2), or through a secure web session. This may all be done without the need for physical access to the hardware.
- Ethernet connection is available through the Cyclades management products to which the Cyclades PM IPDU is connected. When used with Cyclades management products, the Cyclades PM IPDU allows you, via a configurable hotkey, to reboot servers without leaving your telnet/ssh session.
- The Cyclades PM IPDU inherits the security of the console server to which it is connected.

Daisy chaining PM IPDUs with the Cyclades ACS console server or Cyclades TS terminal server is similar to the daisy chained configuration as described in *Daisy chained configuration* on page 3;

however, in the integrated configuration, the first Cyclades PM IPDU is connected to a Cyclades management device instead of a workstation.

Accessing the System Console

Users and administrators may access the Cyclades PM IPDU either by making a direct console connection to the PM IPDU's IN port or by connecting the PM IPDU to a Cyclades console or KVM switch management device.

Direct console access

While using the PM IPDU device independently of other Cyclades devices, local users may connect directly to the system console port (the IN port) of the Cyclades PM IPDU using the console cable with the corresponding adaptor(s).

For more information about connecting directly to the PM IPDU's console, see *Making a Direct Connection for Console Access* on page 20.

Console access through a management device

While integrating the PM IPDU device with a Cyclades console or KVM management device such as the Cyclades ACS console server or the Cyclades OnSite, remote users may access the Cyclades PM IPDU's console port through one of the following interfaces:

- Menu-driven interface - After using telnet or SSH to access the console port equivalent to the managed device on the console server, type the power management hotkey (**Ctrl+P** by default) to bring up a power management menu on the same screen.
- Web interface - Once you are logged into the management device web interface, access the power management functionality by selecting a *Power Management* or *IPDU Power Management* tab on the Web Manager.

See *Integration with Cyclades management products* on page 2 for more background information on integrating a PM IPDU with a Cyclades management device, or refer to the appropriate user documentation for instructions on accessing the PM IPDU console through your specific Cyclades management device.

To connect a Cyclades PM IPDU to an Avocent DSR switch:

Use the included RJ-45 cable adaptor to connect a Cyclades PM IPDU to an Avocent DSR switch.

1. Plug the male end of the adaptor into the DSR switch's SPC port.
2. Plug one end of a straight through Cat 5 cable into the female end of the adaptor.
3. Plug the other end of the Cat 5 cable into the PM IPDU's In port.

Component Overview

General features are common among all products, in the Cyclades PM IPDU family:

- 128 KB flash memory
- 8 KB RAM
- Two RJ-45 RS-232 interfaces
- Digital global current display with two digits and seven segments
- LEDs monitoring ON/OFF status for each port
- Audible over current alarm
- 8-bit Microcontroller-equipped

The following sections list features that are specific to each model:

- *Cyclades PM8 IPDU* on page 7
- *Cyclades PM8i IPDU* on page 8
- *Cyclades PM10 IPDU* on page 8
- *Cyclades PM10i IPDU* on page 9
- *Cyclades PM10i-L30A IPDU* on page 9
- *Cyclades PM10i-32A IPDU* on page 9
- *Cyclades PM10i-32Au IPDU* on page 10
- *Cyclades PM20 IPDU* on page 10
- *Cyclades PM20i IPDU* on page 10

If needed, see Appendix A: *Specifications* on page 63 for more electrical, hardware and environment details about each model. See *Supplied with the PM IPDU* on page 13.

Cyclades PM8 IPDU

The Cyclades PM8 IPDU has the following features:

- One of the following power plugs:
 - 125VAC/15A (NEMA 5-15P)
 - 125VAC/20A (NEMA 5-20P)
 - 125VAC/20A (NEMA L5-20P)
- Eight 125VAC/15A power receptacles (NEMA 5-15R)
- 125VAC/20A circuit breaker
- Vertical mounting (zero U)

 


Figure 1.4: Cyclades PM8 IPDU

Cyclades PM8i IPDU

The Cyclades PM8i IPDU has the following features:

- One 240VAC/8A power inlet (IEC320-C14). See *PM8i-10A IPDU and PM10i-10A IPDU power cables* on page 15 for a list of which power cables are supplied by region.
- Eight 240VAC/8A power receptacles (IEC320-C13)
- 240VAC/10A supplementary protector
- Horizontal (1.5U) mounting

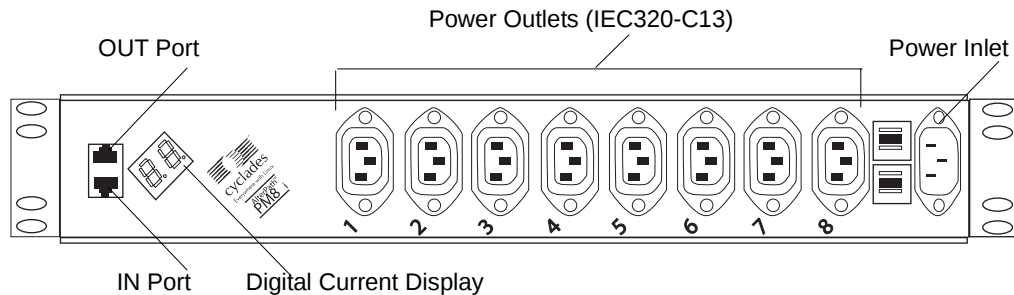


Figure 1.5: Cyclades PM8i IPDU

Cyclades PM10 IPDU

The Cyclades PM10 IPDU has the following features:

- One of the following power plugs:
 - 125VAC/15A power plug (NEMA 5-15P)
 - 125VAC/20A power plug (NEMA 5-20P)
 - 125VAC/20A power plug (NEMA L5-20P)
 - 125VAC/30A power plug (NEMA L5-30P)
- Ten 125VAC/15A power receptacles (NEMA 5-15R)
- 125VAC/15A/20A/two 15A circuit breakers
- Horizontal mounting (1U)

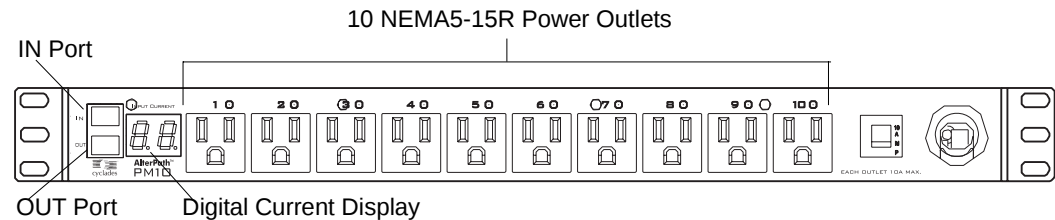


Figure 1.6: Cyclades PM10 IPDU

Cyclades PM10i IPDU

The Cyclades PM10i IPDU has the following features:

- One of the following power plugs:
 - 240VAC/10A power plug (IEC320-C14)
 - 240VAC/16A power plug (IEC320-C20)
 - Ten 240VAC/10A power receptacles (IEC320-C13)
 - 240VAC/10A/20A supplementary protector
 - Horizontal (1U) mounting

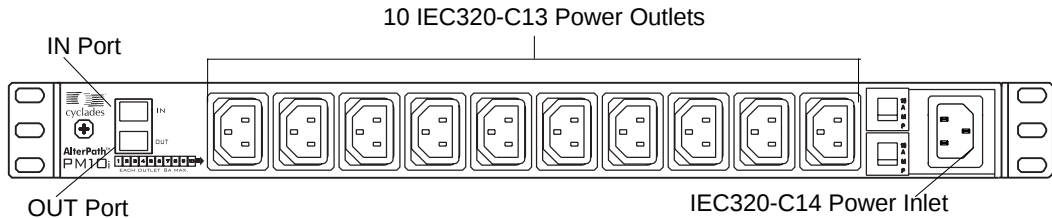


Figure 1.7: Back of the Cyclades PM10i IPDU

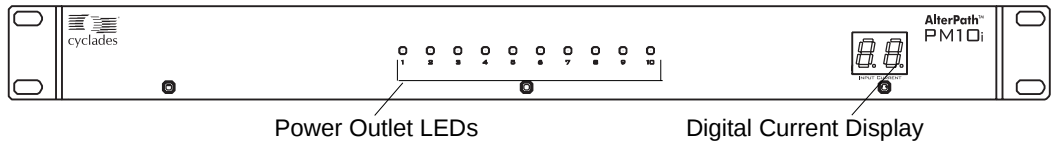


Figure 1.8: Front of the Cyclades PM10i IPDU

Cyclades PM10i-L30A IPDU

The Cyclades PM10i-L30A IPDU has the following features:

- 30A input power cord, L6-30P plug (USA model)
- Ten 240VAC/10A power receptacles (IEC320-C13)
- Two 240VAC/15A magnetic circuit breakers with “press to reset” function
- Horizontal (1U) mounting

Refer to Figure 1.7 on page 9 and Figure 1.8 on page 9 for images of the Cyclades PM10i-L30A IPDU.

Cyclades PM10i-32A IPDU

The Cyclades PM10i-32A IPDU has the following features:

- 32A input power cord; IEC 309 plug.
- Ten 240VAC/10A power receptacles (IEC320-C13)
- Two 240VAC/16A magnetic circuit breakers with accidental-off protection function

- Horizontal (1U) mounting

Refer to Figure 1.7 on page 9 and Figure 1.8 on page 9 for images of the Cyclades PM10i-32A IPDU.

Cyclades PM10i-32Au IPDU

The Cyclades PM10i-32Au IPDU has the following features:

- 32A unterminated input power cord
- Ten 240VAC/10A power receptacles (IEC320-C13)
- Two 240VAC/16A magnetic circuit breakers with accidental-off protection function
- Horizontal (1U) mounting

Refer to Figure 1.7 on page 9 and Figure 1.8 on page 9 for images of the Cyclades PM10i-32Au IPDU.

Cyclades PM20 IPDU

The Cyclades PM20 IPDU is available in three models: PM20-15A IPDU, PM20-20A IPDU, and PM20-30A IPDU. Each model has the following features:

- One of the following power plugs:
 - 125VAC/15A power plug (NEMA 5-15P)
 - 125VAC/20A power plug (NEMA 5-20P)
 - 125VAC/20A power plug (NEMA L5-20P)
 - 125VAC/30A power plug (NEMA L5-30P)
- 20 125VAC/15A power receptacles (NEMA 5-15R)
- 125VAC/20A circuit breaker (15A, 20A, and 30A models)
- Vertical mounting (zero U)



Figure 1.9: The Cyclades PM20 IPDU

Cyclades PM20i IPDU

The Cyclades PM20i IPDU has the following features:

- One of the following power plugs:
 - 240VAC/16A power plug (IEC320-C20)
 - 240VAC/20A power plug (IEC320-C20)
- Twenty 240VAC/10A power receptacles (IEC320-C13)
- 240VAC/20A supplementary protector with a “press to reset” function on the L30A models
- 240VAC/15A branch circuit breaker with accidental-off protected feature (30A model)

- Vertical mounting (zero U)



Figure 1.10: The Cyclades PM20i IPDU, PM20i-32A IPDU and PM20i-32AU IPDU

Cyclades PM20i-32A IPDU

The Cyclades PM20i-32A IPDU has the following features:

- 32A input power cord; IEC 309 plug.
- Twenty 240VAC/10A power receptacles (IEC320-C13)
- 240VAC/two 16A magnetic circuit breakers with accidental-off protection function
- Vertical mounting (zero U)

Refer to Figure 1.10 on page 11 for an image of the Cyclades PM20i-32A IPDU.

Cyclades PM20i-32Au IPDU

The Cyclades PM20i-32Au IPDU has the following features:

- 32A unterminated input power cord
- Twenty 240VAC/10A power receptacles (IEC320-C13)
- 240VAC/two 16A magnetic circuit breakers with accidental-off protection function
- Vertical mounting (zero U)

Refer to Figure 1.10 on page 11 for an image of the Cyclades PM20i-32Au IPDU.

CHAPTER

2

*Installation***Getting Started**

Collect the following equipment prior to installing and configuring the Cyclades PM IPDU in standalone configuration:

- One or more RJ-45 to RJ-45 straight-through cables
- An RJ-45 to DB-9F straight-through adaptor
- A PC running a terminal emulation program

See the following section for the list of other necessary items that come with the PM IPDU.

Supplied with the PM IPDU

All PM IPDU models are shipped with the PM IPDU itself along with the items shown in Table 2.1. The entry for each part provides an illustration, its part number (P/N), description, and purpose. You may use check boxes to check off each item, and you may use the part numbers from this table to reorder any of the parts.

Table 2.1: PM IPDU Shipping Box Contents, Part Numbers and Description

P/N	Description	Purpose
PAC0225	Cyclades PM IPDU Quick Start Guide	Basic installation guide for experienced users in printed format.
CAB0018	RJ-45 to RJ-45 7ft. straight through CAT5 cable	Used for the following: Along with an adaptor, to connect a terminal or PC to the IN port. See <i>To access the console</i> : on page 21. To connect to a Cyclades console or KVM management device. To connect to another Cyclades PM IPDU in a daisy chain. See <i>To daisy chain a PM IPDU</i> : on page 19.
ADB0200	RJ-45 to DB-9F straight-through adaptor	Along with an RJ-45 cable, used to connect a terminal or PC to a PC's COM port. See <i>To access the console</i> : on page 21.

Table 2.1: PM IPDU Shipping Box Contents, Part Numbers and Description (Continued)

P/N	Description	Purpose
CON0132	RJ-45 loopback connector	In case the administrator forgets the admin's password, this is used to place in the OUT port to gain temporary access to the box using the factory default password. <i>See To reset the admin password using the loopback connector: on page 25.</i>
210105	PM IPDU to DSR switch cable adaptor	Used to connect Cyclades PM IPDU to an Avocent DSR switch.
HAR0220	2 mounting brackets with 8 screws (2 spares). For PM10 IPDU and PM10i IPDU	Use to mount the Cyclades PM10 IPDU and PM10i IPDU to a rack or wall. <i>See To mount the Cyclades PM8i IPDU, PM10 IPDU or PM10i IPDU: on page 18.</i>
HAR0302	2 mounting brackets with 5 screws (1 spare). For PM8i IPDU	Use to mount the Cyclades PM8i IPDU to a rack or wall. <i>See To mount the Cyclades PM8i IPDU, PM10 IPDU or PM10i IPDU: on page 18.</i>

See the following section for a list of power cables shipped with specific PM IPDU models.

Modular input power cables for the PM IPDU

If your PM IPDU model does not have a fixed power input cable, it may ship with one of the modular cables listed in the following sections. Depending on your site's location, the modular input power cables included in the box vary. See the following sections to find the input cable that should ship with your PM IPDU product:

- *PM8i-10A IPDU and PM10i-10A IPDU power cables on page 15*
- *PM10i-15A IPDU power cables on page 16*
- *PM10i-16A IPDU and PM 20i-16A IPDU power cables on page 16*

NOTE: The Cyclades PM 10i-32Au IPDU ships with an unterminated power cord. If necessary, your Cyclades representative may provide guidelines on approved power plug installation.

PM8i-10A IPDU and PM10i-10A IPDU power cables**Table 2.2: PM8i-10A IPDU and PM10i-10A IPDU Power Cables**

P/N	Country/Region
CAB0089	US
CAB0055	Australia and New Zealand
CAB0087	Continental Europe
CAB0088	United Kingdom and Ireland

PM10i-15A IPDU power cables

Table 2.3: PM10i-15A IPDU Power Cables

P/N	Country/Region
CAB0191	US

PM10i-16A IPDU and PM 20i-16A IPDU power cables

Table 2.4: PM10i-16A IPDU and PM 20i-16A IPDU Power Cables

P/N	Country/Region
CAB0193	Continental Europe
CAB0192	Australia and New Zealand
CAB0194	United Kingdom and Ireland (fuse limited to 13A as per BS1363)

PM10i-20A IPDU and PM 20i-20A IPDU power cables

Table 2.5: PM10i-20A IPDU and PM 20i-20A IPDU Power Cables

P/N	Type
CAB197	US NEMA L6-20P
CAB0195	US NEMA 5-20P
CAB0198	US NEMA L5-20P

Optional outlet cable package

The following cable packages may be ordered separately for the IEC PM IPDU models:

- 8-outlet cables (C13 female to C14 male) (ACS0040).
- 10-outlet cables (C13 female to C14 male) (ACS00046).

Rack Mounting the Cyclades PM IPDU

You may mount the PM IPDU on a rack or wall or place it on a desktop or other flat surface. Two brackets are supplied with six Phillips screws for attaching the brackets to the PM8i IPDU, the PM10 IPDU and the PM10i IPDU for mounting. The PM8 IPDU has built-in brackets.

- If you are not mounting the PM IPDU, place the PM IPDU on a desk or table.

- If you are mounting the PM IPDU, obtain a Phillips screwdriver and appropriate nuts and bolts before starting the following procedure.

NOTE: When mounting a Cyclades PM IPDU zero U model to a wall stud, securely mount it by using a #10 or larger screw or use a drywall fastener rated min. 25 lb. (11.34 kg).

The following graphics depict the orientation of the brackets for front rack mounting PM IPDU.

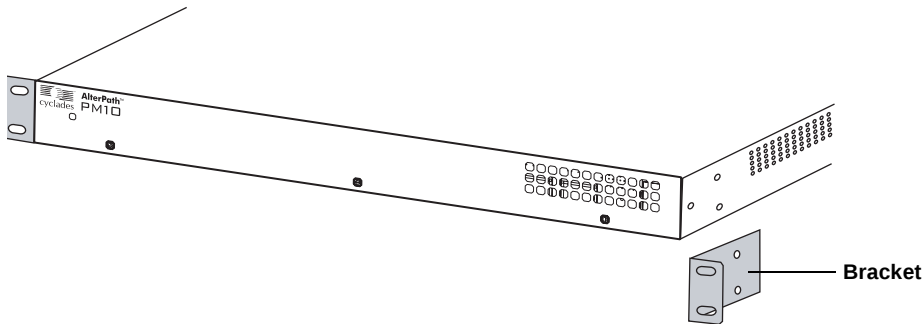


Figure 2.1: Rack Mounting a Cyclades PM10 IPDU, PM10I IPDU and PM8IIIPDU

Installation environment

When installing the PM IPDU, ensure that the following environment specifications are met.

Table 2.6: PM IPDU Optimum Installation Environment

Environment Factor	Recommendation
Temperature	The manufacturer's maximum recommended ambient temperature for the Cyclades PM IPDU is 122 °F (50 °C).
Elevated Operating Ambient Temperature	If the Cyclades PM IPDU is installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature. See above.
Reduced Air Flow	Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
Mechanical Loading	Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
Circuit Overloading	Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Table 2.6: PM IPDU Optimum Installation Environment (Continued)

Environment Factor	Recommendation
Reliable Grounding	Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit, such as power strips or extension cords.

NOTE: Install a Cyclades PM IPDU zero U model in a location where there is an adjacent and accessible wall socket outlet.

To mount the Cyclades PM8i IPDU, PM10 IPDU or PM10i IPDU:

1. Locate the appropriate sets of holes on the PM IPDU.

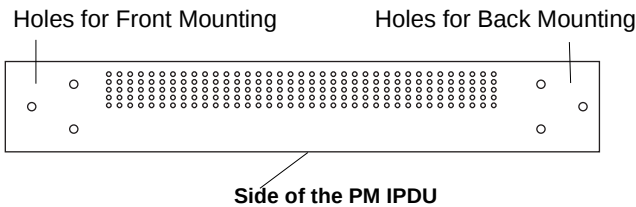


Figure 2.2: Rack Mounting Holes on the PM8i IPDU, PM10 IPDU and PM10i IPDU

2. Connect the two supplied brackets to the PM IPDU, connecting one bracket to each side of the box.
3. For each bracket, insert a screw through each of the three holes on the bracket into the appropriate holes at either end of the PM IPDU.

The following figure shows the bracket flanges on the front of the PM IPDU after the brackets are installed.

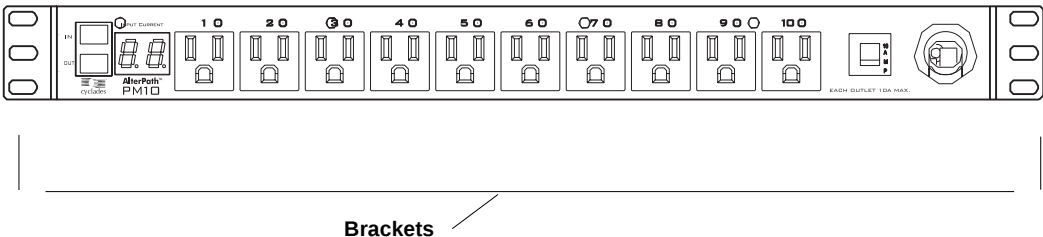


Figure 2.3: PM10 IPDU with Mounting Brackets Installed

4. Use a Phillips screwdriver to tighten the screws.
5. Use the mounting hardware recommended for your rack to mount the PM IPDU on a rack as illustrated in the following graphic.

NOTE: The suggested minimum screw size for wall-mounting the Cyclades PM IPDUs is #10 (4.8 mm or 0.19 in or 3/16 in) or larger. The RJ-45 cable included in the Cyclades PM IPDU package is minimum flame rated VW-1 or FT-1 and has a maximum length of 10 feet (3 meters).

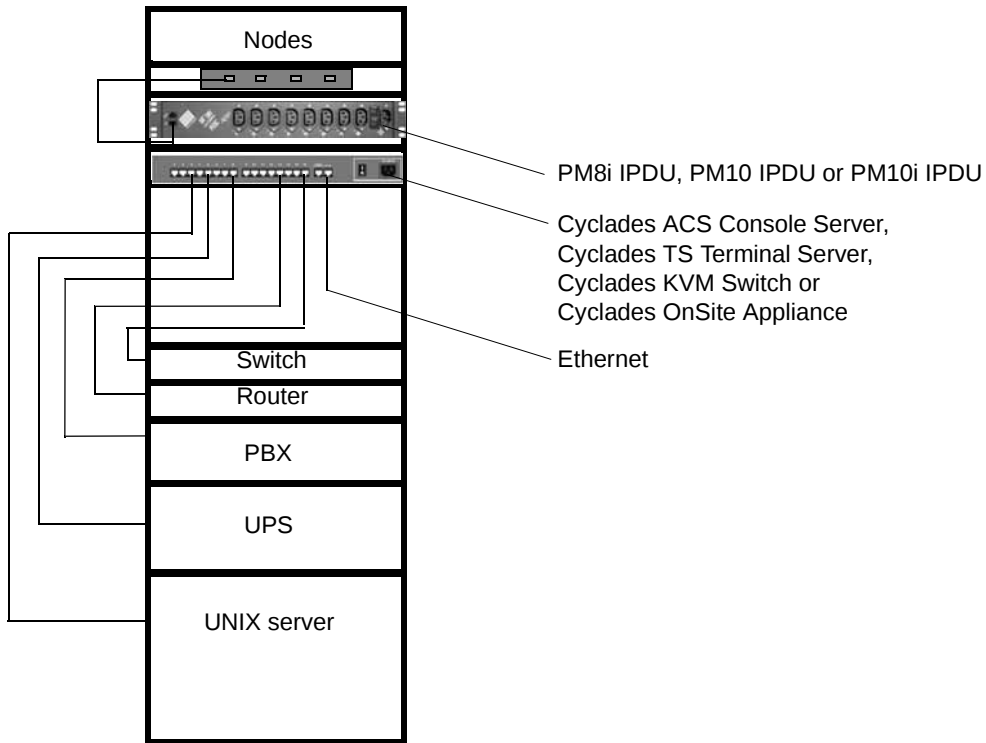


Figure 2.4: Rack Mount for the Cyclades PM8i IPDU, PM10 IPDU or PM10i IPDU

Daisy Chaining PM IPDUs

You may manage a maximum of 128 outlets from a single work station by connecting slave PM IPDUs to the master PM IPDU device. See *Making a Direct Connection for Console Access* on page 20 for more details.

To daisy chain a PM IPDU:

This procedure assumes that a master PM IPDU is already connected to a work station or to a Cyclades console server, terminal server, KVM switch, or OnSite appliance.

1. Connect one end of an RJ-45 cable to the OUT port of the main Cyclades PM IPDU, which is connected to a work station or to a Cyclades console or KVM device (master).
2. Connect the other end of the RJ-45 cable to the IN port of the secondary Cyclades PM IPDU (slave).

3. To connect another PM IPDU to the slave, connect one end of an RJ-45 cable to the OUT port of the last PM IPDU in the chain.
4. Repeat Step 3 until you have connected the desired number of PM IPDUs.

You may control up to 128 power outlets in any combination of PM IPDU models.

Plugging Devices Into PM IPDU Outlets

In order to control power to a device, the device must be plugged into one of the PM IPDU's power outlets.

To plug devices into PM IPDU outlets:

Plug all the devices you want to control into the Cyclades PM IPDU outlets.

Powering Up the PM IPDU

Power up the Cyclades PM IPDU in order to begin managing power to its connected devices.

To power up the PM IPDU:

Plug the power cable into an adjacent AC power source.

NOTE: The Cyclades PM IPDU must be powered by a receptacle with adequate circuit protection.

Making a Direct Connection for Console Access

The system administrator must specify basic settings on the PM IPDU before users may connect to and manage the unit and the connected devices. To prepare to perform necessary basic configuration, make a direct connection to the PM IPDU by connecting a terminal or computer to the IN port as depicted in the following graphic.

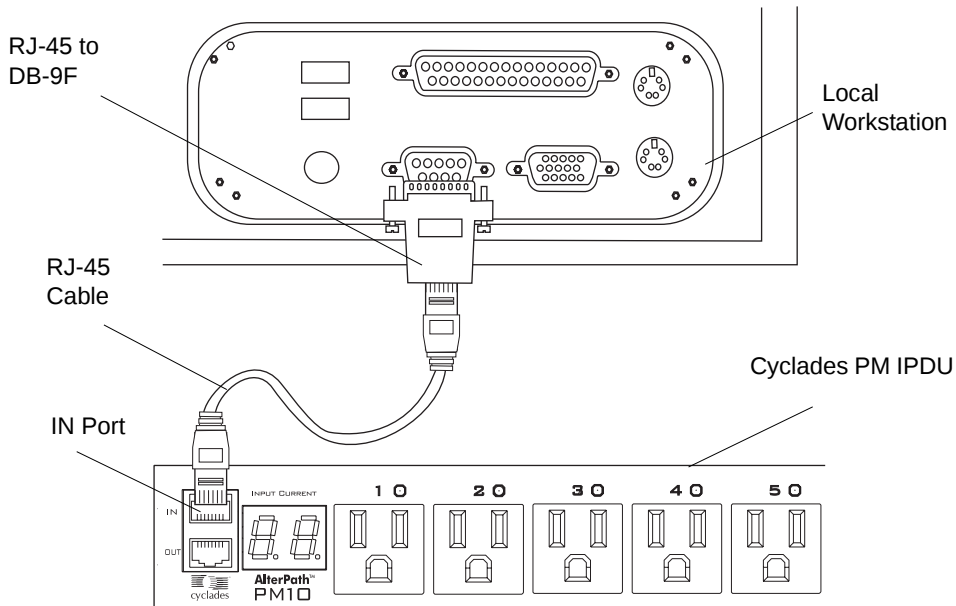


Figure 2.5: Connecting a Local Work Station to the Cyclades PM IPDU

To access the console:

Perform the following steps to connect a computer to the console port of the PM IPDU. This procedure assumes that you know how to use a terminal emulation program.

On a PC, ensure that HyperTerminal or another terminal emulation program is installed on the Windows operating system. On a computer running a UNIX-based operating system, such as Solaris or Linux, make sure that a compatible terminal emulator, such as Kermit or Minicom, is installed.

1. Connect an RJ-45 serial cable to the IN port on the PM IPDU.
2. Connect the other end of the RJ-45 serial cable to the RJ-45 to DB-9F straight through adaptor shipped with the PM IPDU.
3. Connect the adaptor to a DB-9 serial port on a computer.
4. You may need to use a USB serial adaptor in order to connect to the computer.
5. Using a terminal emulation program installed on a computer, start a session. The terminal should be set to ANSI emulation, 9600 bps, 8 bits, no parity, 1stop bit and no flow control.

To log into the PM IPDU through the console (IN port):

From your terminal emulation application, log into the console port as admin.

```
AlterPath PM
Copyright (c) 2002-2006 Avocent Corporation
V 1.9.0 Jun 21, 2006
[PM]: IPDU: 1
[PM]: OUT: 10
Username: admin
```

The default password is pm8. If the password has been changed from the default, use the new password.

If this is a first-time installation, see *Initial Configuration Using the Command Prompt* on page 24 for instructions on changing the default password, adding users, and assigning outlets to users.

See *Command Line Interface* on page 31, for procedures on logging in and using the console commands to manage power on connected devices.

Configuration

The Cyclades PM IPDU may be configured by any one of three methods:

- Command Prompt - Full configuration capabilities.
- Browser - Available only when the PM IPDU is connected directly to an AUX port on a KVM switch or OnSite appliance or connected directly to a serial console port on an ACS console server, TS terminal server or OnSite appliance. This menu allows you to invoke the various PM IPDU operations, such as cycling, switching on, switching off and basic configurations of the power management session to communicate with the PM IPDU. Only a limited number of parameters may actually be changed and saved to the PM IPDU.
- Text-based menu - Available only when used in an integrated configuration. This menu allows you to invoke the various PM IPDU operations such as cycling, switching on, switching off and more.

The following sections offer basic instructions for configuring, restoring the admin password, and uploading firmware on the Cyclades PM IPDU for either the standalone or the daisy chained configuration.

For information about integrated use with the Cyclades ACS console server, Cyclades TS terminal server, Cyclades KVM switch or the Cyclades OnSite appliance, refer to the documentation relevant to each product family.

Default Configuration Parameters

The Cyclades PM IPDU's default configuration is as follows:

- User is admin.
- admin user's password is pm8.
- All outlets are un-named.
- All outlets are unassigned to user.
- All outlets are turned on.
- All outlets are unlocked.

Initial Configuration Using the Command Prompt

To configure the PM IPDU, you must have a work station connected to the console (In) port on the PM IPDU and be logged in as the admin user. See *Making a Direct Connection for Console Access* on page 20 for instructions on connecting to the console. If needed, refer to Chapter 4 beginning on page 31.

To change the default password:

If the default pm8 password is still in use, change the admin password.

NOTE: Changing the default password closes a security hole that could be easily exploited.

1. Log in to the PM IPDU.
2. Enter the factory default username/password **admin/pm8**. A maximum of eight characters (not case sensitive) is allowed.
3. Enter the **passwd** command.
4. Enter a new password when prompted.

To create users with the **adduser** command:

1. Login to the PM IPDU.
2. Enter the **adduser** command followed by the new username.
3. Enter the password when prompted.

To assign outlets to users with the **assign** command:

1. Login to the PM IPDU.
2. Enter the **assign** command followed by the outlet number(s) and username.

Example:

```
pm>assign 2 jane
Outlet 2 assigned to jane.
```

To name the outlets with the **name** command:

1. Login to the PM IPDU.
2. Enter the **name** command followed by the outlet number and desired name of the outlet.

Example:

```
pm>name 2 chispa
2: Outlet now named chispa
```

To save the configuration with the save command:

1. Login to the PM IPDU.
2. Enter the **save** command to save the configuration.

Resetting the Admin Password

In the event the administrator wants to reset the password for the Cyclades PM IPDU (for example, if the administrator forgets the admin password), then the loopback connector that is shipped with the Cyclades PM IPDU may be used for temporary access to the PM IPDU.

To reset the admin password using the loopback connector:

1. If you are not logged out, log out by entering **exit**. (You must be at the login prompt for this to work.)
2. Attach the loopback connector.

Connect the loopback connector shipped with the product to the OUT port of the Cyclades PM IPDU. If necessary, disconnect any cables connected to the OUT port of the Cyclades PM IPDU to allow for the connection of the loopback.

3. Wait one minute and then check the display.

If you are watching the Cyclades PM IPDU's console output (using HyperTerminal or Minicom), messages like the ones shown below are displayed:

```
AlterPath PM
Copyright (c) 2002-2006 Avocent Corporation
V 1.9.0 Jun 21, 2006
Username: [PM]: DCD went ON on output port of IPDU #1
[PM]: Trying to detect loopback cable on OUT port of IPDU #1
[PM]: Loopback detected. Changing administrator password to default.
[PM]: Please remove the loopback cable now.
[PM]: DCD went OFF on output port of IPDU #1
[PM]: IPDU: 1
[PM]: OUT: 8
```

4. Remove the loopback connector.

After one minute, you may remove the loopback connector from the OUT port of the Cyclades PM IPDU. Now the password for the user admin is reset to the default (pm8), and you should be able to log into the Cyclades PM IPDU using the default username/password.

5. Change the password for the admin, if desired, by entering the **passwd** command.
6. Enter the **save** command to save the configuration.

7. If you need to recover the password of many Cyclades PM IPDUs connected in a daisy chain, go to step 1 and perform the procedure on each Cyclades PM IPDU in the chain.

Upgrading the Cyclades PM IPDU Firmware

Starting with version 1.1.0, the Cyclades PM IPDU firmware may be upgraded through its IN port.

The upgrade procedure described here is only valid for units that are currently running firmware versions 1.3.0 or greater. If your Cyclades PM IPDU is running an older firmware version, please follow the instructions in the manual that corresponds to the firmware currently installed on the PM IPDU. Visit <ftp://ftp.cyclades.com/pub/cyclades/alterpath/pm/doc/> for older versions of this manual.

To upgrade PM IPDU firmware:

1. Download the new Cyclades PM IPDU firmware from the Cyclades web site.

After downloading the Cyclades PM IPDU firmware file, save it to the workstation connected to the Cyclades PM IPDU console (IN port).

2. Using either Hyperterminal or Minicom, log into the Cyclades PM IPDU as admin and type in the command:

```
pm>upgrade <IPDU#>
```

If you are currently logged in as a different user, log out and then login as admin.

The <IPDU#> is the number of the IPDU to which you want to upgrade the firmware. If you have only one Cyclades PM IPDU, type **upgrade 1**. If you have, for instance, three units in a daisy chain, type **upgrade 3** or **upgrade 2** depending on which unit you want to upgrade.

NOTE: If you have a daisy chain and you want to upgrade all units, you should start from the last unit and work your way towards the first.

After the upgrade command is executed, the boot loader menu is displayed at the console, as shown below:

```
pm>upgrade 1

-----
Copyright (c) 2003 Cyclades Corporation
AlterPath PM/KVM Boot Loader Version 1.1
-----
Boot Menu
1. Upgrade Firmware.
2. Boot Firmware.
-----
Enter choice (1 or 2): 1
```

3. At the boot loader menu, select option 1 to upgrade the firmware.

The boot loader erases the firmware currently in the unit and asks you to upload the new firmware, as shown below:

```
-----
Copyright (c) 2003 Cyclades Corporation
AlterPath PM/KVM Boot Loader Version 1.1
-----
Boot Menu
1. Upgrade Firmware.
2. Boot Firmware.
-----
Enter choice (1 or 2): 1
Erasing firmware...done.
Downloading image. Please send file in 10 seconds.
```

4. Use your terminal emulator program to upload the Cyclades PM IPDU firmware file to the PM IPDU using the Xmodem protocol.

To use HyperTerminal in Windows:

1. From the top menu select *Transfer-Send*.
The Send File pop-up window appears.

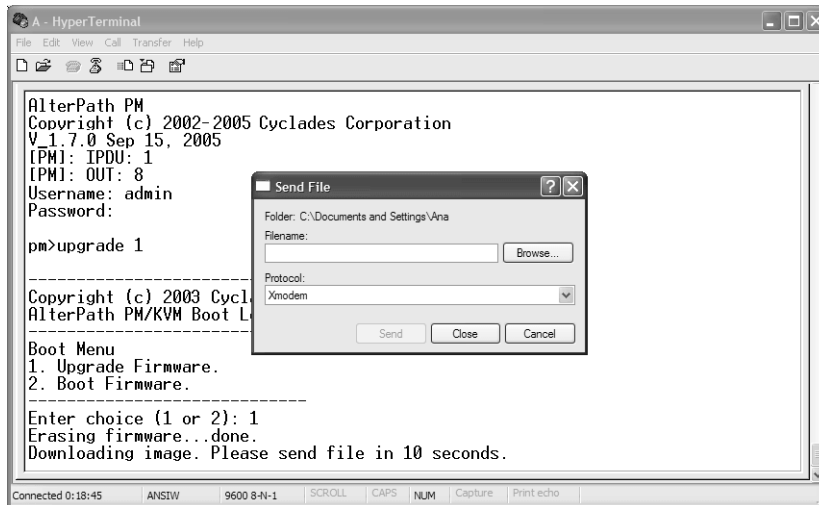


Figure 3.1: Sending Firmware using HyperTerminal

2. Click the *Browse* button to set the proper path for the Cyclades PM IPDU firmware file located on your work station.

NOTE: You must browse for the proper file and click the *Send* button within 10 seconds of selecting *Transfer-Send*. If you fail to do so, an error message will appear and the transmission will fail. You will then be given another 10-second window in which to repeat steps 1. through 4.

3. Select *Xmodem* as the protocol.
4. Click on the *Send* button.

To use Minicom in Linux:

1. From the main screen, press **Ctrl+A S** (for sending files).
The Upload pop-up window appears.
2. Select *xmodem* as the protocol.
The Select a file for upload window appears.
3. Move the cursor next to the Cyclades PM IPDU firmware file for upload, and press the **Spacebar** to tag it. See Figure 3.2.
4. Press **Enter** to start the file transfer.

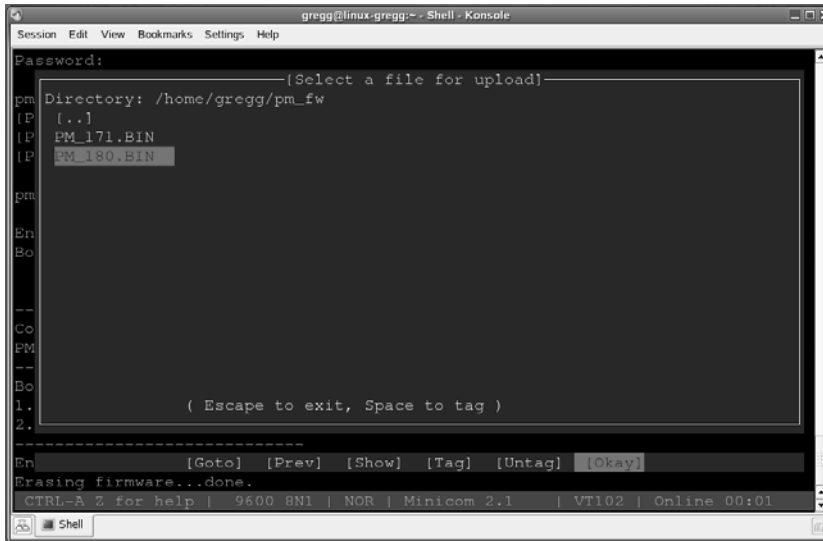


Figure 3.2: Sending Firmware using Minicom

If you use a different terminal emulator, please refer to the documentation provided by the manufacturer on how to transfer files using the xmodem protocol.

If the file transfer is successful, the Cyclades PM IPDU console displays the login prompt. At this point, the upgrade process of the unit is complete; you may log into the Cyclades PM IPDU and perform actions as usual.

If the file transfer fails, an error message appears on the PM IPDU console, and the boot loader menu is displayed again so you may redo the firmware upgrade process.

The screen would be similar to the one shown below:

```
Erasing firmware...done.
Downloading image. Please send file in 10
seconds. error.
-----
Copyright (c) 2003 Cyclades Corporation
AlterPath PM/KVM Boot Loader Version 1.1
-----
Boot Menu
1. Upgrade Firmware.
2. Boot Firmware.
-----
Enter choice (1 or 2):
```

In this case, select *option 2* from the menu and repeat the firmware upload procedure. If the problem persists, contact Technical Support for assistance.

CHAPTER

4

Command Line Interface

When using the Cyclades PM IPDU independently of other Cyclades products, users and administrators may access the PM IPDU command line interface through a terminal emulation program by making a console connection from a local computer to the IN port on the PM IPDU. See *To access the console*: on page 21 for instructions.

PM IPDU User Interface

You may access the PM IPDU user interface by following the instructions provided in *To access the console*: on page 21. The menu that appears after connecting to the console depends on whether the PM IPDU has booted or not before you connect.

If you connect to the console before powering up the Cyclades PM IPDU or reboot while connected, the Boot Menu appears.

If the PM IPDU has already booted before you connect to the PM IPDU through the console, the Login prompt appears.

On the Boot Menu, you may enter **2** (or just wait approximately 12 seconds) to select the Boot Firmware option. The Login prompt appears.

Daisy chained PM IPDUs in the login prompt

Number of PM IPDUs

If no PM IPDUs are daisy chained, the [PM]: IPDU: line appears only once, and the value is 1.

If there are any PM IPDUs daisy chained to the first PM IPDU, the [PM]: IPDU: line appears once for each PM IPDU in the chain. For each PM IPDU, the value is incremented by 1. The final appearance of the [PM]: IPDU: line will show the total number of PM IPDUs in the daisy chain.

Number of PM IPDU outlets

If no PM IPDUs are daisy chained, the [PM]: OUT: line appears only once, and the value is equal to the number of outlets on the PM IPDU.

If there are any PM IPDUs daisy chained to the first PM IPDU, the [PM]: OUT: line appears once for each PM IPDU in the chain. For each PM IPDU, the value shows the cumulative total of outlets until the total number of outlets for the entire chain is displayed.

Logging in to the PM IPDU

After the Username: prompt, enter your username.

NOTE: If there are daisy chained PM IPDUs, you will need to press **Enter** after the final [PM]: OUT: line appears.

After the Password: prompt, enter the password for the username entered.

The default user is admin and the default password is pm8.

After a successful login, the PM IPDU command prompt appears after which you may use any of the commands described in this chapter.

After logging in, the administrator may choose to change his or her password through the passwd command (seen later). Passwords may be set to null, which indicates that no password is needed.

Commands

All commands are available to the admin user, and most commands are available to regular users as well.

Table 4.1: User Commands

Regular User Command	Regular User Command
<i>current</i> on page 35	<i>off</i> on page 49
<i>currseg</i> on page 37	<i>on</i> on page 50
<i>cycle</i> on page 38	<i>passwd</i> on page 50
<i>exit</i> on page 41	<i>status</i> on page 54
<i>help</i> on page 42	<i>temperature</i> on page 56
<i>humidity</i> on page 43	<i>unlock</i> on page 57
<i>interval</i> on page 46	<i>ver</i> on page 59
<i>list</i> on page 47	<i>voltage</i> on page 60
<i>lock</i> on page 48	<i>whoami</i> on page 61

The following commands are available only to the admin user.

Table 4.2: Admin User (privileged) Commands

Admin User Command	Admin User Command
<i>adduser</i> on page 33	<i>hwocp</i> on page 44
<i>alarm</i> on page 34	<i>id</i> on page 45
<i>assign</i> on page 34	<i>name</i> on page 48
<i>buzzer</i> on page 35	<i>reboot</i> on page 51
<i>currentprotection</i> on page 36	<i>restore</i> on page 53
<i>dbsync</i> on page 39	<i>save</i> on page 53
<i>deluser</i> on page 39	<i>syslog</i> on page 55
<i>display</i> on page 40	<i>unassign</i> on page 57
<i>factory_defaults</i> on page 41	<i>upgrade</i> on page 58

NOTE: When a range of outlets is used in a command and the range spans more than one PM IPDU in a daisy chain, the range of outlets must *not* be specified by name. The range of outlets may only be specified by number in this situation.

adduser

The `adduser` command adds one username to the internal database. A maximum of eight characters (not case sensitive) is allowed, and a maximum of eight individual users is allowed. This command is available to the admin user only.

Syntax

```
adduser <user>
```

Arguments

```
<user> username
```

Examples

To add a user, enter the following.

```
pm>adduser popper
Password:
Re-enter password:
Username/password set for user popper.
pm>
```

alarm

The alarm command sets and reads the current threshold. This command is available to the admin user only.

Syntax

```
alarm | [<IPDU#>|<IPDU_ID>] | <threshold>
```

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> Identification string previously set by the id command.

<threshold> The current threshold is the maximum allowed current on the power strip

no argument Displays alarm status of all PM IPDUs in the daisy chain

Examples

To set the threshold, enter the following.

```
pm>alarm 1 5.6
```

```
Setting alarm threshold on IPDU #1 to 5.6A
```

```
pm>alarm 2 7.8
```

```
Setting alarm threshold on IPDU #2 to 7.8A
```

To read the threshold, enter the following.

```
pm>alarm
```

```
Alarm threshold on IPDU #1 is 5.6A
```

```
Alarm threshold on IPDU #2 is 7.8A
```

assign

The assign command assigns an outlet to a given user. The user is then be able to manage such outlets. This command is available to the admin user only.

Syntax

```
assign <outlet_number> <user>
```

Arguments

<outlet_number> Outlet number, such as “5”, outlet name such as “sunfire”, or group of outlets such as “1, 3-5”

<user> Desired username

Examples

To assign outlet 4, 6, 7, and 8 to user *tess*, enter the following.

```
pm>assign 4, 6-8 tess
4: Outlet assigned to tess.
6: Outlet assigned to tess.
7: Outlet assigned to tess.
8: Outlet assigned to tess.
```

buzzer

The `buzzer` command displays or changes the buzzer notification status. When set to *on*, a buzzer sounds when the current exceeds the threshold. This command is available to the admin user only.

Syntax

```
buzzer <on|off|status>
```

Arguments

`on` Enables buzzer

`off` Disables buzzer

`status` Displays the buzzer status

Examples

To get the current status of the buzzer notification, enter the following.

```
pm>buzzer status
Buzzer is ON on IPDU #1
Buzzer is ON on IPDU #2
```

To turn buzzer notification on or off, enter the following.

```
pm>buzzer on
Buzzer turned ON on IPDU #1
Buzzer turned ON on IPDU #2
pm>buzzer off
Buzzer turned OFF on IPDU #1
Buzzer turned OFF on IPDU #2
```

current

The `current` command displays the total current drawn by Cyclades PM IPDUs and the maximum current the unit has drawn (current peak). It may also be used to clear the saved peak current value.

Syntax

```
current [<IPDU#>|<IPDU_ID>]|reset
```

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> Identification string previously set by the id command

reset Clears the saved peak current value

Examples

To get the current status for all units, enter the following.

```
pm> current
IPDU #1: True RMS current: 2.2A. Maximum current: 9.4A
IPDU #2: True RMS current: 2.0A. Maximum current: 10.2A
```

To get the current status for a specific unit, enter the following.

```
pm> current 2
IPDU #2: True RMS current: 2.4A. Maximum current: 10.2A
```

To reset maximum current drawn, enter the following:

```
pm>current reset
IPDU #1: Clearing maximum recorded current to zero.
IPDU #2: Clearing maximum recorded current to zero.
```

currentprotection

The currentprotection command turns on and off the over current protection feature. The overcurrent protection does not let any outlet be turned on if the current drawn by the unit is greater than the current threshold configured with the command alarm. This command may also be used to display the current protection status. This command is available to the admin user only.

Syntax

```
currentprotection <on|off|status>
```

Arguments

on Enables over current protection

off Disables over current protection

status Displays the current protection status

Examples

To display current protection status for all units, enter the following.

```
pm>currentprotection status
IPDU #1: Overcurrent protection is OFF.
IPDU #2: Overcurrent protection is OFF.
```

To enable current protection status for all units, enter the following.

```
pm>currentprotection ON
IPDU #1: Overcurrent protection turned ON.
IPDU #2: Overcurrent protection turned ON.
```

To disable current protection status for all units, enter the following.

```
pm>currentprotection off
IPDU #1: Overcurrent protection turned OFF.
IPDU #2: Overcurrent protection turned OFF.
```

currseg

The currseg command lets you view the current for the lower or upper segment of outlets. This command is only useful for IPDUs with dual current sensors (30A and 32A models). The lower segment (segment A) would be outlets 1-5 on a PM 10 series IPDU, and the upper segment (segment B) would be outlets 6-10 on a PM 10 series IPDU.

Syntax

```
currseg A|B [reset]
```

Arguments

A|B segment A or segment B

reset Clears the max recorded current for A & B.

Example

To view the current load of segment A, enter the following.

```
pm>currseg A
IPDU #1: True RMS current for segment A: 0.4A. Maximum current for
segment A: 0.
4A
```

To view the current load of segment B, enter the following.

```
pm>currseg B
IPDU #1: True RMS current for segment B: 2.5A. Maximum current for
segment B: 2.
5A
```

To reset the maximum recorded current for A and B, enter the following.

```
pm>currseg reset
IPDU #1: Clearing maximum recorded current for segment A and B to
zero.
```

cycle

The cycle command power cycles an outlet or groups of outlets. You may use the outlet number or the outlet name (see command name for details).

Syntax

```
cycle all|<outlet_string>
```

Arguments

all Cycles all outlets in the PM IPDU or PM IPDU daisy chain

<outlet_string> Outlet number, such as “5”, outlet name such as “sunfire”, or group of outlets such as “1, 3-5”

Examples

To cycle one outlet, enter the following.

```
pm> cycle 3
3: Outlet turned off.
3: Outlet turned on.
```

To cycle multiple outlets, enter the following.

```
pm>cycle 2, 3, 5-7
2: Outlet turned off.
3: Outlet turned off.
5: Outlet turned off.
6: Outlet turned off.
7: Outlet turned off.
2: Outlet turned on.
3: Outlet turned on.
5: Outlet turned on.
6: Outlet turned on.
7: Outlet turned on.
```

dbsync

The dbsync command synchronizes the user database for all PM IPDUs in the chain. This command is available to the admin user only.

Syntax

```
dbsync
```

Arguments

```
none
```

Examples

To synchronize the user database for all PM IPDUs in the chain, enter the following.

```
pm>dbsync
pm>Synchronizing user database in IPDU #2.
```

deluser

The deluser command deletes one username from the internal database. This command is available to the admin user only.

Syntax

```
deluser <user>
```

Arguments

```
<user> Desired username
```

Examples

To delete the user *rog*, enter the following.

```
pm>deluser rog
Username deleted.
```

display

The display command allows logical inversion of the 2-digit, 7-segment display. The purpose of this command is to allow a PM IPDU to be mounted upside-down. This command is available to the admin user only.

NOTE: The decimal point will be at the top of the display when the PM IPDU is mounted upside down.

Syntax

```
display [<IPDU#>|<IPDU_ID> [0|180]]
```

-or-

```
display
```

Arguments

no argument show display status of all PM IPDUs in the daisy chain

<IPDU#> number of the PM IPDU in the chain

<IPDU_ID> Identification string previously set by the id command

0 normal mode (default)

180 inverted display

Examples

To set the display if IPDU #2 to inverted mode, enter the following.

```
pm>display 2 180
IPDU #2: Display mode set to 180 degrees rotated.
```

To set the display of IPDU #1 to normal mode, enter the following.

```
pm>display 1 0
IPDU #1: Display mode set to normal.
```

To view the display status, enter the following.

```
pm>display
IPDU #1: Display mode set to normal.
IPDU #2: Display mode set to 180 degrees rotated.
IPDU #3: Display mode set to show current and cycle each 2 seconds.
```

exit

The exit command exits the session.

Syntax

```
exit
```

Arguments

none

Examples

To exit the current session, enter the following.

```
pm>exit
```

```
AlterPath PM
Copyright (c) 2002-2006 Avocent Corporation
V 1.9.0 Jun 21, 2006
Username:
```

factory_defaults

The `factory_defaults` command resets the unit to its factory configuration so that all outlets are on, unlocked, unnamed, and no users are created. When used with a daisy chain, and no argument is given, this command resets all units in the chain. This command is available to the admin user only.

Syntax

```
factory_defaults [<IPDU#>|<IPDU_ID>]
```

Arguments

no argument resets all PM IPDUs in the daisy chain to factory default

<IPDU#> number of the PM IPDU in the chain

<IPDU_ID> Identification string previously set by the `id` command

Examples

To reset the factory defaults, enter the following.

```
pm>factory_defaults 1
Setting configuration to defaults on IPDU #1
1: Outlet turned on.
2: Outlet turned on.
3: Outlet turned on.
4: Outlet turned on.
5: Outlet turned on.
6: Outlet turned on.
7: Outlet turned on.
8: Outlet turned on.
Saving configuration to flash on IPDU #1 ... done.
```

help

The help command displays the system help message for all commands or for a single command when specified.

NOTE: When the admin user is logged in, the help command displays all commands. When a regular user is logged in, the help command displays only the regular user commands.

Syntax

```
<command> help
```

-or-

```
help
```

Arguments

```
<command> Any available command
```

Examples

To view the system help message for a specific command, enter the command followed by **help**.

```
pm>syslog help
Usage: syslog <on|off|status>
Turn the syslog messages on the console on or off
```

To view the system help message for all commands, enter the following.

```
pm>help
```

Available commands:

adduser	alarm	assign
buzzer	current	currentprotection
currseg	cycle	dbsync
deluser	display	exit
factory_defaults	help	hwocp
humidity	id	interval
list	lock	name
off	on	passwd
reboot	restore	save
status	syslog	temperature
unassign	unlock	upgrade
ver	voltage	whoami

NOTE: To get detailed help on the commands listed above type
'<command> help';

NOTE: Some commands accept as input a data type called
<outletString>. <outletString> is a string representing
one or more outlets. This string can be:

- one single outlet.

Examples: on 3 (turn on outlet 3);

off router (turn off the outlet called router).

- a group of outlets.

Examples: status 1,3,5 (get status of outlets 1, 3 and 5);

lock 2,5-7 (lock the outlets 2, 5, 6 and 7).

humidity

The humidity command displays the Cyclades PM IPDU's surrounding humidity and the maximum humidity the IPDU has registered (humidity peak). It may also be used to clear the saved peak humidity value. This command only works on PM IPDU models with a humidity sensor.

Syntax

```
humidity [<IPDU#>|<IPDU_ID>]|reset
```

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> Identification string previously set by the id command

reset Resets the maximum humidity registered

Examples

To get the humidity for all units in a daisy chain, enter the following.

```
pm> humidity
IPDU #1: humidity: 42.3%. Maximum: 58.7%
IPDU #2: humidity: 44.0% Maximum: 72.6%
IPDU #3: Does not have humidity sensor.
```

To get the humidity for specific unit, provide the unit number as an argument, enter the following.

```
pm> humidity 2
IPDU #2: humidity: 44.0% Maximum: 72.6%
```

To reset the maximum humidity registered, use `reset` as a argument, enter the following.

```
pm>humidity reset
IPDU #1: Clearing maximum recorded humidity to zero.
IPDU #2: Clearing maximum recorded humidity to zero.
```

hwocp

The `hwocp` command checks the status of the hardware overcurrent protection. When overcurrent protection is on, the power is shut off. When the overcurrent protection is off or reset, the power is on and the PM IPDU is running in normal mode. If no string identifying the IPDU is given, all PM IPDUs in the daisy chain are affected by this command. This command is available to the admin user only.

Syntax

```
hwocp [<IPDU#>|<IPDU_ID> [reset]]
```

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> Identification string previously set by the id command

reset turn overcurrent protection off (normal operation)

Examples

To check the hardware overcurrent status of IPDU #1, enter the following.

```
pm>hwocp 1
IPDU #1: HW overcurrent protection is OFF.
```

To reset the hardware overcurrent protection, enter the following.

```
pm>hwocp 1 reset
IPDU #1 was reset
```

id

The `id` command sets or displays the ID of a PM IPDU. A maximum of 16 characters (not case sensitive) is allowed. Spaces, numbers, and special characters are allowed. This command is available to the administrator user only.

This command works in a daisy chain.

Syntax

```
id [<IPDU#>] [<IPDU_ID>]
```

-or-

```
id [<IPDU_ID>] [<IPDU_ID>]
```

-or-

```
id
```

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> Identification string previously set by the `id` command

If <IPDU_ID> follows <IPDU#>, or if the <IPDU_ID> parameter is typed twice, the latest entry of the <IPDU_ID> parameter updates the ID string.

`no argument` Displays the IDs of all PM IPDUs in the daisy chain

Examples

To set the ID of PM IPDU 1 *R&D*, enter the following.

```
pm>id 1 R&D
IPDU #1: id = R&D
```

To display the ID of PM IPDU 2, enter the following.

```
pm>id 2
IPDU #2: id = QA
```

To rename an ID to “sammy,” using an existing ID “QA,” enter the following.

```
pm>id QA sammy
IPDU #2 = sammy
```

To display the IDs of all PM IPDUs in the daisy chain, enter the following.

```
pm>id
IPDU #1: id = R&D
IPDU #2: id = QA
```

interval

The interval command configures the power up interval for each outlet in the system. The power up interval of an outlet is the time (in seconds) the unit will wait, after turning this outlet on, to turn on any other outlet. This command is available to the admin user only.

Syntax

```
interval <outlet_number> <duration>
```

Arguments

<duration> Sets the power up interval of outlets. Valid intervals are from 0 to 100. Default value is 0.5

NOTE: When this value is set to 0.0, there is still a power up interval of approximately 0.1 seconds between outlets.

<outlet_number> Outlet number, such as “5”, outlet name such as “sunfire”, or group of outlets such as “1, 3-5”

Examples

To display the interval of outlet 1, enter the following.

```
pm>interval 1
1: Outlet power on interval is 0.0 sec.
```

To set the interval of outlets 2, 4, 5, and 6 to a value of 2.4, enter the following.

```
pm>interval 2,4-6 2.4
2: Outlet power on interval set to 2.4 sec.
4: Outlet power on interval set to 2.4 sec.
5: Outlet power on interval set to 2.4 sec.
6: Outlet power on interval set to 2.4 sec.
```

list

The list command lists users created and outlets assigned to each user (for the administrator), or just the outlets assigned to the user logged in at the moment (for the regular user).

Syntax

```
list
```

Arguments

none

Examples

As admin, to list usernames and associated outlets in the internal database, enter the following.

```
pm>list
-----
User          Outlets
-----
gregg         1-3
george        4, 6-7, 9
mila          5, 8
sarah         4-9
-----
```

As mila, to list mila's name and associated outlets in the internal database, enter the following.

```
pm>list
-----
User          Outlets
-----
mila          5, 8
-----
```

lock

The lock command locks an outlet or group of outlets in the current state. The response to this command is a list of status lines, one per power port. This command works on all PM IPDUs in a daisy chain.

Syntax

```
lock all|<outlet_string>
```

Arguments

<outlet_string> Outlet number, such as “5”, outlet name such as “sunfire”, or group of outlets such as “1, 3-5”

Examples

To lock outlets 1, 2, and 6, enter the following.

```
pm>lock 1,2,6
1: Outlet locked.
2: Outlet locked.
6: Outlet locked.
```

name

The name command names an outlet. A maximum of 16 alphabetic and numeric characters (not case sensitive) is allowed with these exceptions:

- The hyphen (-), percent (%), and comma (,) characters are not allowed.
- Numeric characters are not allowed as the first character of a name.

This command is available to the administrator user only.

Syntax

```
name <outlet_number> <name>
```

Arguments

<outlet number> Outlet number, such as “5”

<name> Desired outlet name

Examples

To name outlet 4 as nowhere, enter the following.

```
pm>name 4 nowhere
4: Outlet now named nowhere
```

off

The off command turns an outlet or group of outlets off. This command works on outlets in a PM IPDU daisy chain.

Syntax

```
off all|<outlet_string>
```

Arguments

all Turns off all outlets in the PM IPDU or PM IPDU daisy chain

<outlet_string> Outlet number, such as “5”, outlet name such as “sunfire”, or group of outlets such as “1, 3-5”



CAUTION: The “all” argument will turn off all outlets in a PM IPDU or PM IPDU daisy chain.

Examples

To turn all outlets off, enter the following.

```
pm>off all
1: Outlet turned off.
2: Outlet turned off.
3: Outlet turned off.
4: Outlet turned off.
5: Outlet turned off.
6: Outlet turned off.
7: Outlet turned off.
8: Outlet turned off.
```

To turn off outlets 2 through 7 (or all outlets except 1 and 8 in a single PM8 IPDU), enter the following.

```
pm>off 2-7
2: Outlet turned off.
3: Outlet turned off.
4: Outlet turned off.
5: Outlet turned off.
6: Outlet turned off.
7: Outlet turned off.
```

on

The on command turns an outlet or a group of outlets on. If more than one outlet is selected there will be an interval between outlets being powered on, the interval is defined by the interval command. This command works on outlets in a PM IPDU daisy chain.

Syntax

```
on all|<outlet_string>
```

Arguments

all Turns on all outlets in the PM IPDU or PM IPDU daisy chain

<outlet_string> Outlet number, such as “5”, outlet name such as “sunfire”, or group of outlets such as “1, 3-5”

Examples

To turn on outlets 1, 3, 4, and 5, type:

```
pm>on 1, 3-5
1: Outlet turned on.
3: Outlet turned on.
4: Outlet turned on.
5: Outlet turned on.
```

passwd

The passwd command sets a password. The Administrator has a default password (pm8), which may be changed. Regular users may change or set only their own password. The Administrator may change his or her own password or any regular user’s password.

Syntax

```
passwd <user_name>
```

Arguments

<user_name> Name of the user whose password is being changed

no argument To change admin password if logged in as admin. To change <user> password if logged in as <user>

Examples

To change the password for user alpha, when logged in as admin, enter the following.

```
pm>passwd alpha
Password:
Re-enter password:
Username/password set for user alpha.
```

To change the admin password (must be logged in as admin), enter the following

```
pm>passwd
Password: <new password>
Re-enter password:
Username/password set for user admin.
```

To change the password of a regular user when logged in as that user, enter the following.

```
pm>passwd
Password:
Re-enter password:
Username/password set for user alpha.
```

reboot

The reboot command reboots a PM IPDU. You may reboot a specific unit by issuing the reboot command followed by the unit's logical number or the unit's ID. Issuing the reboot command without a parameter reboots the first unit in a chain, not all the units in a chain. This command is available to the admin user only.

Syntax

```
reboot [<IPDU#>|<IPDU_ID>]
```

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> Identification string previously set by the id command

Examples

To reboot the first unit of the chain, or to reboot the unit in stand alone mode, enter the following.

```
pm>reboot
saving configuration to flash on IPDU #1 ... Done.
-----
Copyright (c) 2003 Cyclades Corporation
AlterPath PM/KVM Boot Loader Version 1.1
-----
Boot Menu
1. Upgrade Firmware.
2. Boot Firmware.
-----
Enter choice (1 or 2): Timeout...
Booting...

V_1.6.0 - compatible
Saving configuration to flash on IPDU #0 ... Done.
```

```
AlterPath PM
Copyright (c) 2002-2006 Avocent Corporation
V 1.8.0 Jan 9, 2006
[PM]: IPDU: 1
[PM]: OUT: 10
Username:
```

To reboot the a specific IPDU in the chain (IPDU 2 shown), enter the following.

```
pm>reboot 2
[PM]: DCD went OFF on output port of IPDU #1
[PM]: IPDU: 1
[PM]: OUT: 10
pm>[PM]: DCD went ON on output port of IPDU #1
[PM]: IPDU: 2
[PM]: OUT: 18
```

restore

The restore command restores the configuration currently saved in flash. This command is available to the admin user only.

Syntax

restore

Arguments

N/A

Examples

To restore the configuration currently saved in flash, enter the following.

```
pm>restore
1: Outlet turned on.
2: Outlet turned on.
3: Outlet turned on.
4: Outlet turned on.
5: Outlet turned on.
6: Outlet turned on.
7: Outlet turned on.
8: Outlet turned on.
```

save

The save command saves the current configuration in the flash device built in to all Cyclades PM IPDU units. This command saves the username/password database and the specific information pertaining to each outlet such as outlet name, outlet assignments, outlet state. This command is available to the admin user only.

If you save your configuration to flash it will be restored after the next reboot. If you do not save your configuration to flash you will lose it all after the next reboot.

Syntax

save

Arguments

none

Examples

To save the configuration to flash, enter the following.

```
pm>save
Saving configuration to flash on IPDU #1 ... Done.
Saving configuration to flash on IPDU #2 ... Done.
```

An error message will be displayed if there is an error while writing the configuration to flash.

status

The status command displays the status of selected outlets.

Syntax

```
status all|<outlet_string>
```

Arguments

<outlet_string> Outlet number, such as “5”, outlet name such as “sunfire”, or group of outlets such as “1, 3-5”

all Displays the status of all outlets in a PM IPDU or PM IPDU daisy chain

Examples

To display the status of outlet 1, enter the following.

```
pm>status 1
```

Outlet	Name	Status	Interval (s)	Users
1	g1	Unlocked ON	0.00	gregg

To display the status of all outlets, enter the following.

```
pm>status all
```

Outlet	Name	Status	Interval (s)	Users
1	g1	Unlocked ON	0.00	gregg
2	g2	Unlocked ON	2.40	gregg
3	g3	Unlocked ON	0.00	gregg
4	g4	Unlocked		
ON	2.40	george, sarah		
5	g5	Unlocked		
ON	2.40	mila, sarah		
6	g6	Unlocked		
ON	2.40	george, sarah		
7	g7	Unlocked		
ON	0.50	george, sarah		
8	g8	Unlocked		
ON	0.50	mila, sarah		

syslog

The syslog command displays or changes the syslog notification status. This command is available to the admin user only.

Syntax

```
syslog on|off|status
```

Arguments

on Enables message to be displayed in the console when there is an over current situation

off Disables the message notification

status Displays the current syslog status of all PM IPDUs on the daisy chain

no argument Same as status

Examples

To get the current status of the syslog notification, enter the following.

```
pm>syslog
```

```
Syslog is ON on IPDU #1
```

```
Syslog is ON on IPDU #2
```

To turn on and off the syslog notification, enter the following as necessary.

```
pm>syslog on
Syslog turned ON on IPDU #1
Syslog turned ON on IPDU #2
pm>syslog off
Syslog turned OFF on IPDU #1
Syslog turned OFF on IPDU #2
```

temperature

The temperature command displays the Cyclades PM IPDU's surrounding temperature and the maximum temperature the unit has registered (temperature peak). It may also be used to clear the saved peak temperature value.

Syntax

```
temperature [<IPDU#>|<IPDU_ID>]|reset
```

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> Identification string previously set by the id command

reset Resets the maximum temperature registered

Examples

To get the temperature for all units in a daisy chain, enter the following.

```
pm> temperature
IPDU #1: Temperature: 36.1°C (96.9°F). Maximum: 36.1°C (96.9°F).
IPDU #2: Temperature: 20.0°C (68.0°F). Maximum: 25.0°C (77.0°F).
IPDU #3: Does not have temperature sensor.
```

To get the temperature for specific unit, provide the unit number as an argument, enter the following.

```
pm> temperature 2
IPDU #2: Temperature: 20.0°C (68.0°F). Maximum: 25.0°C (77.0°F)
```

To reset the maximum temperature registered, use `reset` as a argument, enter the following.

```
pm>temperature reset
IPDU #1: Clearing maximum recorded temperature to zero.
IPDU #2: Clearing maximum recorded temperature to zero.
```

unassign

The unassign command removes the assignment of an outlet or group of outlets from a given user. This command is available to the admin user only.

Syntax

```
unassign <outlet_string> <user>
```

Arguments

<outlet_string> Outlet number, such as “5”, outlet name such as “sunfire”, or group of outlets such as “1, 3-5”

<user> Desired username

Examples

To unassign outlet 2 and 4 from user *diderot*, enter the following.

```
pm>unassign 2,4 diderot
2: Outlet no longer assigned to diderot.
4: Outlet no longer assigned to diderot.
```

unlock

The unlock command unlocks an outlet or group of outlets in the current state. The response to this command is a list of status lines, one per power port.

Syntax

```
unlock all|<outlet_string>
```

Arguments

<outlet_string> Outlet number, such as “5”, outlet name such as “sunfire”, or group of outlets such as “1, 3-5”

all Unlocks all outlets in the PM IPDU or PM IPDU daisy chain

Examples

To unlock outlets 2, 3, 4, and 8, enter the following.

```
pm>unlock 2-4,8
2: Outlet unlocked.
3: Outlet unlocked.
4: Outlet unlocked.
8: Outlet unlocked.
```

upgrade

The upgrade command is available only to the administrator. This command goes directly to the boot options menu before actually rebooting. You may either upgrade or boot the firmware.

NOTE: For details on upgrading using the upgrade command or using the reboot command, see *Upgrading the Cyclades PM IPDU Firmware* on page 26.

Syntax

upgrade <IPDU#> | <IPDU_ID>

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> Identification string previously set by the id command

NOTE: If you wish to upgrade more than one IPDU, it is recommended that you upgrade the most remote IPDU first.

Examples

To upgrade 1, type:

```
pm>upgrade 1
saving configuration to flash on IPDU #1 ... Done.
-----
Copyright (c) 2003 Cyclades Corporation
AlterPath PM/KVM Boot Loader Version 1.1
-----
Boot Menu
1. Upgrade Firmware.
2. Boot Firmware.
-----
Enter choice (1 or 2): 1
Erasing firmware...done.
Downloading image. Please send file in 10 seconds.done.
V_1.6.0 - compatible

Saving configuration to flash on IPDU #1 ... Done.
```



```
AlterPath PM
Copyright (c) 2002-2006 Avocent Corporation
V 1.9.0 Jun 21, 2006
[PM]: IPDU: 1
[PM]: OUT: 10
Username: admin
Password:
```

ver

The ver command shows the current software version and hardware model information of the selected PM IPDU.

Syntax

```
ver [<IPDU#>|<IPDU_ID>]
```

-or-

```
ver
```

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> Identification string previously set by the id command

no argument Displays version information for the PM IPDU and for all PM IPDUs in a daisy chain

Examples

To view the current software version of all IPDUs in a daisy chain, enter the following.

```
pm>ver
IPDU #1: Hw with 10 outlets 16 AMPs max Sw V 1.9.0 Jun 21, 2006 id
mila model 7
IPDU #2: Hw with 8 outlets 15 AMPs max Sw V 1.9.0 Jun 21, 2006 id
sarah model 23
```

NOTE: If an IPDU has an id assigned to it, the ver command displays the word "id" followed by the name of the IPDU and the model number of the PM IPDU; however, if no id is configured for the IPDU, the ver command displays the word "id" without a name following it as shown below.

```
pm>ver
IPDU #1: Hw with 10 outlets 16 AMPs max Sw V 1.9.0 Jun 21, 2006 id
model 7
IPDU #2: Hw with 8 outlets 15 AMPs max Sw V 1.9.0 Jun 21, 2006 id
model 23
```

To get this information for a specific unit, provide the unit number as an argument.

```
pm>ver 2
IPDU #2: Hw with 8 outlets 15 AMPs max Sw V 1.9.0 Jun 21, 2006 id
sarah model 23
```

voltage

The voltage command shows the true RMS voltage. This command only works on PM IPDU models with a voltage sensor.

Syntax

```
voltage [<IPDU#>|<IPDU_ID> [AB|AC|BC]]
```

Arguments

<IPDU#> IPDU number in a daisy chain

<IPDU_ID> identification string previously set by the id command

AB|AC|BC reserved for future use

no argument displays the RMS voltage on all units if voltage sensors are available

Examples

whoami

The whoami command shows the username of the user currently logged in.

Syntax

whoami

Arguments

none

Examples

To view the current username, enter the following.

```
pm>whoami  
admin
```


APPENDICES

Appendix A: Specifications

Table A.1: PM8-15A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-125 VAC
Max Output Current Total	15A (de-rated to 12A)
Max Output Current Each Outlet	15A (de-rated to 12A)
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	6.1 lb (2.8 kg)
Physical Dimensions (W x D x H)	1.8 x 2.2 x 37.6 in (4.57 x 5.6 x 95.5 cm)

Table A.2: PM8-20A IPDU and PM8-L20A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-125 VAC
Max Output Current Total	20A (de-rated to 16A)
Max Output Current Each Outlet	15A (de-rated to 12A)
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	6.1 lb (2.8 kg)
Physical Dimensions (W x D x H)	1.8 x 2.2 x 37.6 in (4.57 x 5.6 x 95.5 cm)

Table A.3: PM8i-10A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	10A
Max Output Current Each Outlet	10A
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	5 lb (2.3 kg)
Physical Dimensions (W x D x H)	17 x 3.7 x 2.63 in (43.2 x 9.4 x 6.7 cm)

Table A.4: PM10-15A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-125 VAC
Max Output Current Total	15A (de-rated to 12A)
Environmental	
Max Output Current Each Outlet	15A (de-rated to 12A)
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	8 lb. (3.64 kg)
Physical Dimensions (W x D x H)	17 x 8 x 1.75 in (43.18x 20.32 x 4.45 cm)

Table A.5: PM10-20A IPDU and PM10-L20A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-125 VAC
Max Output Current Total	20A (de-rated to 16A)
Max Output Current Each Outlet	15A (de-rated to 12A)
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	8 lb. (3.64 kg)
Physical Dimensions (W x D x H)	17 x 8 x 1.75 in (43.18x 20.32 x 4.45 cm)

Table A.6: PM10-L30A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-125 VAC
Max Output Current Total	30A (de-rated to 24A)
Max Output Current Each Outlet	15A (de-rated to 12A)
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	8 lb. (3.64 kg)
Physical Dimensions (W x D x H)	17 x 8 x 1.75 in (43.18x 20.32 x 4.45 cm)

Table A.7: PM10i-10A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	10A
Max Output Current Each Outlet	10A
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	8 lb. (3.64 kg)
Physical Dimensions (W x D x H)	17 x 8 x 1.75 in (43.18x 20.32 x 4.45 cm)

Table A.8: PM10i-15A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	15A (de-rated to 12A)
Max Output Current Each Outlet	10A (de-rated to 8A)
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	8 lb. (3.64 kg)
Physical Dimensions (W x D x H)	17 x 8 x 1.75 in (43.18x 20.32 x 4.45 cm)

Table A.9: PM10i-16A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	16A
Max Output Current Each Outlet	10A
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	8 lb. (3.64 kg)
Physical Dimensions (W x D x H)	17 x 8 x 1.75 in (43.18x 20.32 x 4.45 cm)

Table A.10: PM10i-20A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	20A (de-rated to 16A)
Max Output Current Each Outlet	10A (de-rated to 8A)
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	8 lb. (3.64 kg)
Physical Dimensions (W x D x H)	17 x 8 x 1.75 in (43.18x 20.32 x 4.45 cm)

Table A.11: PM10i-32A IPDU and PM10i-32Au IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	32A
Max Output Current Each Outlet	10A
Environmental	
Operating Temperature	32-122 °F (0-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	12 lb. (5.45 kg)
Physical Dimensions (W x D x H)	17 x 11.5 x 1.75 in (43.18x 29.21 x 4.45 cm)

Table A.12: PM10i-L30A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	30A (de-rated to 24A)
Max Output Current Each Outlet	10A (de-rated to 8A)
Environmental	
Operating Temperature	32-122 °F (0-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	12 lb. (5.45 kg)
Physical Dimensions (W x D x H)	17 x 11.5 x 1.75 in (43.18x 29.21 x 4.45 cm)

Table A.13: PM20-20A IPDU and PM20-L20A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-125 VAC
Max Output Current Total	20A (de-rated to 16A)
Max Output Current Each Outlet	15A (de-rated to 12A)
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	17 lb. (7.73 kg)
Physical Dimensions (W x D x H)	1.8 x 2.2 x 66 in (4.6 x 5.59 x 167.6 cm)

Table A.14: PM20-L30A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-125 VAC
Max Output Current Total	30A (de-rated to 24A)
Max Output Current Each Outlet	15A (de-rated to 12A)
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	17 lb. (7.73 kg)
Physical Dimensions (W x D x H)	1.8 x 2.2 x 66 in (4.6 x 5.59 x 167.6 cm)

Table A.15: PM20i-16A IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240VAC
Max Output Current Total	16A
Max Output Current Each Outlet	10A
Environmental	
Operating Temperature	32-122 °F (0-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	17 lb. (7.73 kg)
Physical Dimensions (W x D x H)	2.0 x 2.8 x 66 in (5.18 x 7.11 x 167.6 cm)

Table A.16: PM20i-20A IPDU and PM20i-L20A IPDU Electrical Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	20A (de-rated to 16A)
Max Output Current Each Outlet	10A (de-rated to 8A)
Environmental	
Operating Temperature	32-122 °F (0-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	17 lb. (7.73 kg)
Physical Dimensions (W x D x H)	2.0 x 2.8 x 66 in (5.18 x 7.11 x 167.6 cm)

Table A.17: PM20i-L30A Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	30A (de-rated to 24A)
Max Output Current Each Outlet	10A (de-rated to 8A)
Environmental	
Operating Temperature	32-122 °F (0-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	17 lb. (7.73 kg)
Physical Dimensions (W x D x H)	2.0 x 2.8 x 66 in (5.18 x 7.11 x 167.6 cm)

Table A.18: PM20i-32A IPDU and PM20i-32Au IPDU Specifications

Characteristics	Specifications
Electrical	
Input Voltage	100-240 VAC
Max Output Current Total	32A
Max Output Current Each Outlet	10A
Environmental	
Operating Temperature	50-122 °F (10-50 °C)
Relative Humidity	5%-95%
Mechanical	
Weight	17 lb. (7.73 kg)
Physical Dimensions (W x D x H)	2.0 x 2.8 x 66 in (5.18 x 7.11 x 167.6 cm)

Interface Pinouts

The following table illustrates the Cyclades PM IPDU's pinouts for the IN and OUT RS-232 serial ports (RJ-45F connectors).

Table A.19: Pinouts for IN and OUT RS-232 Serial Ports

Signal	Name/Function	I/O	In Pin	OUT Pin
RTS	Request to Send	(O)	5	1
DTR	Data Terminal Ready	(O)	7	2
TxD	Transmit Data	(O)	6	3
Gnd	Ground	N/A	4	4
CTS	Clear to Send	(I)	1	5
RxD	Receive Data	(I)	3	6
DCD	Data Carrier Detect	(I)	2	7
DSR	Data Set Ready	(I)	8	8

Appendix B: Safety Instructions

Follow the safety precautions in this document when installing and operating the Cyclades PM. See the following instructions:

- *Safety Instructions* on page 73
- *Sicherheitsanweisungen* on page 74
- *Istruzioni di Sicurezza* on page 75
- *Instruções de Segurança* on page 76
- *Instrucciones de seguridad* on page 77
- *Instructions de sécurités* on page 78
- *Circuit Breakers* on page 79

Safety Instructions

Read all the following safety guidelines to protect yourself and your Cyclades PM.



DANGER! All outlets of the Cyclades PM output high voltage. Necessary precautions should be taken.

DANGER! To help prevent electric shock, plug the Cyclades PM into a properly grounded power source. The power cord is equipped with a three-prong plug to help ensure proper grounding. Do not use adaptor plugs or remove the grounding prong from the cable. Do not use extension cords with the Cyclades PM.

DANGER! Do not push any objects through the openings of the Cyclades PM. Doing so may cause fire or electric shock by shorting out interior components.

DANGER! There is a possibility of severe electrical shock from either the live or neutral side of any of the power outlets or their wiring, even if one of the circuit breakers is disabled.



IMPORTANT: Cyclades PM is intended for enterprise and indoor use only.

IMPORTANT: To help protect the Cyclades PM from electrical power fluctuations, use a surge suppressor, line conditioner, or uninterruptible power supply.

IMPORTANT: Be sure that nothing rests on the cables of the Cyclades PM and that they are not located where they may be stepped on or tripped over.

IMPORTANT: Do not spill food or liquids on the Cyclades PM. If it gets wet, disconnect the power immediately and contact Cyclades.

IMPORTANT: Keep your Cyclades PM away from heat sources.

Sicherheitsanweisungen

Bitte lesen und befolgen Sie diese Sicherheitsrichtlinien um sich und Ihren Cyclades PM IPDU vor Schäden zu bewahren.

GEFAHR! Auch nach Öffnung einer der beiden Sicherungen kann das Gerät noch unter Spannung über die Phasen- oder Nullleiterzufuhr stehen.

GEFAHR! Alle Ausgänge des Cyclades PM IPDU führen Hochspannung. Bitte die erforderlichen Vorsichtsmaßnahmen einhalten.

GEFAHR! Um elektrische Stromschläge zu vermeiden, verbinden Sie bitte das Eingangskabel des Cyclades PM IPDU mit einer ausreichend geerdeten Stromversorgung. Das Netzkabel ist mit drei Leitungen versehen um korrekte Erdung zu ermöglichen. Bitte benutzen Sie keine Adapterstecker und entfernen Sie nicht die Erdungsleitung. Bitte verwenden Sie keine Verlängerungskabel.

GEFAHR! Bitte führen Sie keine Gegenstände in die Öffnungen des Cyclades PM IPDU ein. Dies könnte zu Bränden oder elektrischen Schock durch Kurzschluss der internen Komponenten führen.

GEFAHR! Auch nach Öffnung einer der beiden Sicherungen kann das Gerät noch unter Spannung über die Phasen- oder Nullleiterzufuhr stehen.

Wichtig: Der Cyclades PM IPDU ist für den Unternehmenseinsatz und den Gebrauch innerhalb von abgeschlossenen Gebäuden vorgesehen.

Wichtig: Um den Cyclades PM IPDU vor elektrischen Spannungsschwankungen zu schützen empfehlen wir den Einsatz von Überspannungsreglern, Spannungsglätttern oder USVs.

Wichtig: Bitte stellen Sie sicher, daß keine Gegenstände auf den Kabeln des Cyclades PM IPDU liegen und die Kabel so geführt sind, daß niemand darauf treten oder darüber stolpern kann.

Wichtig: Bitte schütten Sie keine Nahrungsmittel oder Flüssigkeiten auf den Cyclades PM IPDU. Falls das Gerät naß werden sollte trennen Sie bitte sofort die Netzverbindung und kontaktieren Cyclades.

Wichtig: Bitte halten Sie Ihren Cyclades PM IPDU vor Hitzequellen entfernt.

Istruzioni di Sicurezza

Vi preghiamo di attenervi alle seguenti direttive per la vostra sicurezza e un sicuro utilizzo dell' Cyclades PM IPDU.

PERICOLO! Tutte le prese dell' Cyclades PM IPDU sono sotto alta tensione. Occorre prendere precauzioni.

PERICOLO! Per evitare di prendere la scossa, inserire la spina dell' Cyclades PM IPDU nell' appropriata presa a terra. L'alimentatore è equipaggiato con una spina a tre poli per assicurare un corretto collegamento. Non utilizzare adattatori e non rimuovere la spina a tre poli dal cavo. Non utilizzare prolunghe.

PERICOLO! Non inserire oggetti nelle aperture dell' Cyclades PM IPDU. Farlo potrebbe causare un incendio o danneggiare i componenti interni.

PERICOLO! C'è la possibilità che la fase o la terra rimanga sotto tensione anche se uno degli interruttori è disattivato.

Importante: Le Cyclades PM IPDU è certificato per uso aziendale e solamente in luogo chiuso.

Importante: Per proteggere le Cyclades PM IPDU da fluttuazioni di corrente elettrica, utilizzare un limitatore di sovracorrente, un condizionatore di linea, o un gruppo di alimentazione continua, UPS.

Importante: Assicurarsi che niente giaccia sui cavi dell' Cyclades PM IPDU e che questi non causino intralcio al passaggio.

Importante: Non versare cibo o liquidi sull' Cyclades PM IPDU. Nel caso l'apparecchiatura si bagnasse, togliere immediatamente l'alimentazione e contattare Cyclades.

Importante: Tenere lontano da fonti di calore.

Instruções de Segurança

Leia e siga as diretrizes de segurança abaixo para sua proteção e de seu Cyclades PM.

PERIGO! Alta voltagem está presente em todas as tomadas do Cyclades PM IPDU. As devidas precauções devem ser tomadas.

PERIGO! Para evitar choques elétricos, conecte o Cyclades PM IPDU a uma tomada devidamente aterrada. O cabo de força possui uma tomada com três pinos para ajudar a garantir que o devido aterramento seja feito. Não use adaptadores nem remova o pino de aterramento da tomada. Não use extensões para conexão elétrica com o Cyclades PM IPDU.

PERIGO! Não introduza objetos pelas aberturas existentes no Cyclades PM IPDU. O curto-circuito de componentes internos pode fazer com que o produto pegue fogo e causar choques elétricos.

PERIGO! É possível que haja tensão presente nos circuitos de fase ou neutro mesmo que um dos dispositivos de proteção contra sobrecorrente esteja atuando.

Importante: O Cyclades PM IPDU é destinado exclusivamente ao uso comercial em ambientes fechados.

Importante: Para ajudar a proteger o Cyclades PM IPDU contra consequências nocivas causadas por flutuações na rede elétrica, use um estabilizador, filtro ou baterias que evitem eventual interrupção no fornecimento de energia.

Importante: Garanta que não haja nenhum objeto sobre os cabos do Cyclades PM IPDU e que eles não estejam em locais de trânsito de pessoas para que não sejam pisados e para que não causem quedas ou acidentes.

Importante: Não derrame alimentos ou líquidos sobre o Cyclades PM IPDU. Se o produto for molhado, desconecte-o da tomada imediatamente e entre em contato com a Cyclades.

Importante: Mantenha o Cyclades PM IPDU longe de fontes de calor.

Instrucciones de seguridad

Lea y siga estas pautas de seguridad para protegerse a usted y a su Cyclades PM.

¡PELIGRO! Todos los enchufes de salida Cyclades PM IPDU tienen alto voltaje. Se deben tomar las precauciones necesarias.

¡PELIGRO! Para ayudar a prevenir descargas eléctricas, conecte el Cyclades PM IPDU en una fuente de energía correctamente puesta a tierra. El cable eléctrico está equipado de un enchufe del tres conectores para ayudar a asegurar la puesta a tierra apropiadamente. No utilice adaptadores de enchufe, ni quite el conector de tierra. No utilice extensores con el Cyclades PM IPDU.

¡PELIGRO! No empuje ningún objeto en las aberturas del Cyclades PM IPDU. El hacerlo puede causar fuego o descargas eléctricas poniendo en cortocircuito los componentes interiores.

¡PELIGRO! Existe la posibilidad de tensión en cualquier conector del PM IPDU, incluso si uno de los interruptores está deshabilitado.

Importante: El Cyclades PM IPDU se piensa para la empresa y el uso de interior solamente.

Importante: Para ayudar a proteger el Cyclades PM IPDU contra fluctuaciones de la corriente eléctrica, utilice un supresor de fluctuaciones, acondicionador de línea, o fuente de alimentación ininterrumpida.

Importante: Asegurese que nada se apoya sobre los cables del Cyclades PM IPDU y que no están localizados donde puedan ser pisados cuando estén encendidos.

Importante: No derrame alimentos o líquidos en el Cyclades PM IPDU. Si se hubiera mojado, desconecte la energía inmediatamente y entre en contacto con Cyclades.

Importante: Mantenga su Cyclades PM IPDU lejos de fuentes de calor.

Instructions de sécurités

Lisez et suivez les instructions de sécurité pour votre protection et celle de le Cyclades PM IPDU

DANGER! Toutes les prises de l'Cyclades PM produisent une tension électrique élevée. Prenez les précautions d'usage.

DANGER! Pour aider à éviter tout choc électrique, branchez l'Cyclades PM IPDU à une source électrique correctement liée à la terre. Le cordon électrique est équipé d'une prise à 3 broches pour aider à assurer une connexion correcte avec la terre. N'utilisez pas d'adaptateurs ou n'enlevez pas la broche de la terre du cable. N'utilisez pas de rallonge électrique avec l'Cyclades PM IPDU.

DANGER! Ne pas faire passer aucun objets à travers les ouvertures de l'Cyclades PM IPDU. Le faire peut causer un feu ou des chocs électriques en court-circuitant des composants interne.

DANGER! Il y a une possibilité de présence de courant pour la Phase et le Neutre même si l'un des relais électrique est désactivé.

Important: L'Cyclades PM IPDU est prévu pour les entreprises dans un usage à l'intérieur seulement.

Important: Pour aider à protéger l'Cyclades PM IPDU des fluctuations d'alimentation électrique, utilisez un filtre de surtension, un conditionneur de ligne ou une source d'alimentation qui ne peut pas être interrompue.

Important: Soyez sûr que rien ne repose sur les cables de l'Cyclades PM IPDU, qu'ils ne sont pas sur un lieu de passage, qu'ils ne peuvent pas être piétiné et que l'on ne peut pas trébucher dessus.

Important: Ne reversez pas de nourriture ou de liquides sur le Cyclades PM IPDU. Si elle est humide, deconnectez l'alimentation électrique immédiatement et contactez Cyclades.

Important: Gardez l'Cyclades PM IPDU à distance des sources de chaleur.

Appendix C: Circuit Breakers

The PM IPDU circuit breakers are designed to shut the power off to some or all of the PM IPDU outlets in case the rated current is exceeded. The circuit breaker mechanism for each PM IPDU model is explained in the following sections.

PM IPDU Units with One Circuit Breaker

Only one circuit breaker is used for the following units:

- PM8-15A IPDU
- PM8-20A IPDU
- PM8-L20 IPDU
- PM10-15A IPDU
- PM10-20A IPDU
- PM10-L20 IPDU
- PM20-20A IPDU
- PM20-L20 IPDU
- PM20i-16A IPDU
- PM20i-20A IPDU

In the event of a current overload in any of these units, the entire unit shuts down causing all outlets to disconnect.

PM8i IPDU and PM10i IPDU

The PM8i IPDU and some versions of the PM10i IPDU (10, 15, 16, and 20 amps) have two circuit breakers each. Both circuit breakers are designed to protect different phases of the same circuit inside the unit. If either one of the two circuit breakers trips, the entire unit will shut down.

PM10-L30A IPDU

The PM10-L30A IPDU has two 15-amp circuit breakers. The first circuit breaker controls outlets 1 through 5 and the power supply to the logic board; the second circuit breaker controls outlets 6 through 10. If the total current flow to outlets 6 through 10 exceeds 15 amps due to equipment connected to these outlets, then the second circuit breaker will trip causing outlets 6 through 10 to shut down. This does not affect outlets 1 through 5, which are controlled by the first circuit breaker.

If, however, current overload causes the first circuit breaker to trip, then the entire power unit shuts down because the power supply is also tied to the first circuit breaker.

Refer to Table C.1, “Circuit Breaker Trip Time,” on page 83 to determine the time it takes for the circuit breaker to trip based on the amount of current overload.

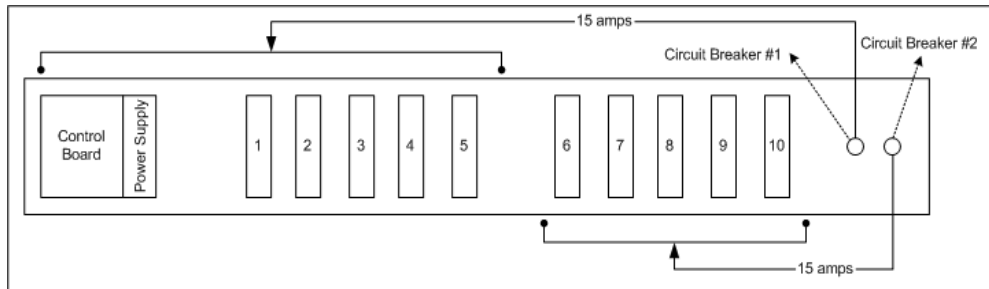


Figure C.1: PM10-L30A IPDU Circuit Breakers

PM10i-L30A IPDU

The PM10i-L30A IPDU has two 15-amp circuit breakers. The first circuit breaker controls outlets 6 through 10; the second controls outlets 1 through 5. In the event that the total current flow to outlets 6 through 10 exceeds 15 amps due to equipment connected to these outlets, the first circuit breaker will trip causing outlets 6 through 10 to shutdown. This does not affect outlets 1 through 5, which are controlled by the second circuit breaker.

As the PM10i-L30A IPDU has the controller (see Control Board in the figure below) powered from the line side of one of the circuit breakers, the whole unit will be inoperative only if both circuit breakers trip, but the controller will still function.

When either circuit breaker trips, only the power outlets of that segment will be affected, and half of the outlets remain operative.

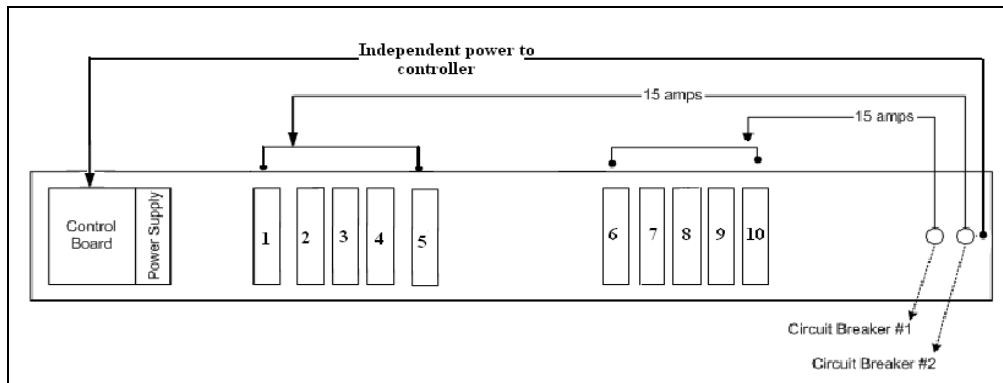


Figure C.2: PM10i-L30A IPDU Circuit Breakers

PM10i-32A IPDU and PM10i-32Au IPDU

The PM10i-32A has two 16-amp circuit breakers. The first circuit breaker controls outlets 6 through 10; the second controls outlets 1 through 5. In the event that the total current flow to outlets 6 through 10 exceeds 16 amps due to equipment connected to these outlets, the first circuit breaker

will trip causing outlets 6 through 10 to shutdown. This does not affect outlets 1 through 5, which are controlled by the second circuit breaker.

As the PM10i-32A has the controller powered from the line side of one of the circuit breakers, the whole unit will be inoperative only if both circuit breakers trip, but the controller will still function.

When either circuit breaker trips, only the power outlets of that segment will be affected, and half of the outlets remain operative.

PM20-L30A IPDU

The PM20-L30A IPDU has two 15-amp circuit breakers. The first circuit breaker controls outlets 11 through 20; the second controls outlets 1 through 10 as well as the power supply to the logic board. In the event that the total current flow to outlets 11 through 20 exceeds 15 amps due to equipment connected to these outlets, then the first circuit breaker will trip causing outlets 11 through 20 to shutdown. This does not affect outlets 1 through 10 which is controlled by the second circuit breaker.

If, however, current overload causes the second circuit breaker to trip, then the entire power unit shuts down because the power supply is also tied to the second circuit breaker.

Refer to Table C.1, “Circuit Breaker Trip Time,” on page 83 to determine the time it takes for the circuit breaker to trip based on the amount of current overload.

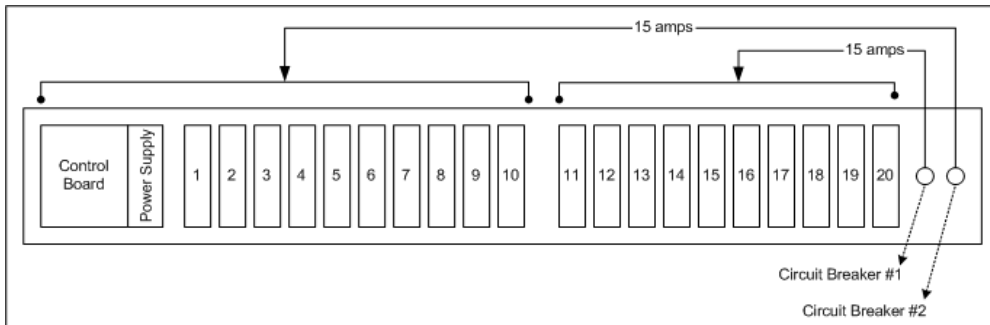


Figure C.3: PM20-L30A IPDU Circuit Breakers

PM20i-L30A IPDU

The PM20i-L30A IPDU has two 15-amp circuit breakers. The first circuit breaker controls outlets 11 through 20; the second controls outlets 1 through 10. In the event that the total current flow to outlets 11 through 20 exceeds 15 amps due to equipment connected to these outlets, then the first circuit breaker will trip causing outlets 11 through 20 to shutdown. This does not affect outlets 1 through 10 which are controlled by the second circuit breaker.

As the PM20i-L30A IPDU has the controller (see Control Board in the figure below) powered from the line side of one of the circuit breakers, the whole unit will become inoperative only when both circuit breakers trip; however, the controller will remain functioning.

When either circuit breaker trips, only the power outlets of that segment will be affected, and half of the outlets remain operative.

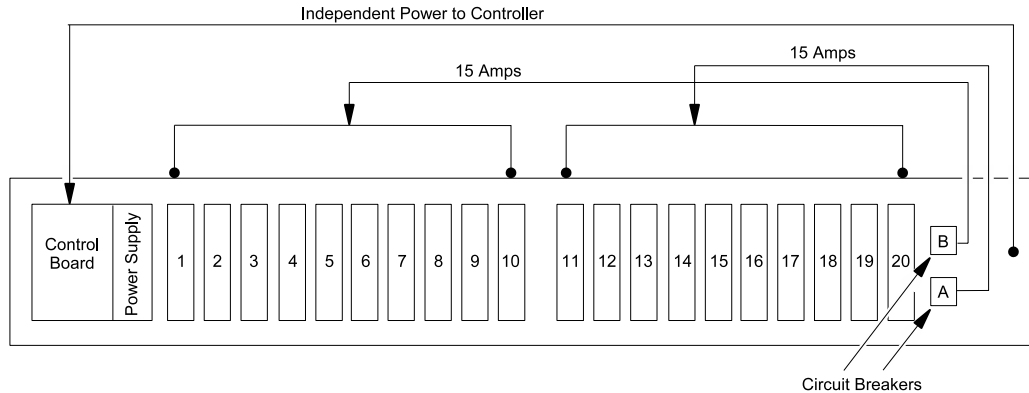


Figure C.4: PM20i-L30A IPDU, PM20i-32A IPDU and PM20i-32Au IPDU Circuit Breakers

PM20i-32A IPDU and PM20i-32Au IPDU

The PM20i-32A IPDU and the PM20i-32Au IPDU have two 16-amp circuit breakers. The first circuit breaker controls outlets 11 through 20; the second controls outlets 1 through 10. In the event that the total current flow to outlets 11 through 20 exceeds 16 amps due to equipment connected to these outlets, then the first circuit breaker will trip causing outlets 11 through 20 to shutdown. This does not affect outlets 1 through 10 which are controlled by the second circuit breaker.

As the PM20i-32A IPDU and the PM20i-32Au IPDU have the controller powered from the line side of one of the circuit breakers, the whole unit will become inoperative only when both circuit breakers trip; however, the controller will remain functioning.

When either circuit breaker trips, only the power outlets of that segment will be affected, and half of the outlets remain operative.

Circuit Breaker Trip Time

Depending on the model, the Cyclades PM IPDU uses either one 10 amp, one 20 amp, two 15 amp, or two 16 amp circuit breakers. The following table shows the circuit breaker trip time for all PM IPDU models.

Table C.1: Circuit Breaker Trip Time

Current Load	Trip Time
200%	5-30 seconds
300%	1.8-10 seconds
400%	0.9-5 seconds
500%	0.5-3.3 seconds
600%	0.38-2.3 seconds
800%	0.2-1.3 seconds
1000%	0.15-0.9 seconds

INDEX

A

- AC power 20
- adduser 33
- adduser command 24
- admin
 - logging in as 22
- admin password 25
- alarm 34
- alarms and monitoring 1
- AlterPath PM
 - components 7
 - models 7
 - user interface 31
- assign command 24, 34
- assigning outlets to users 24
- Australia 15, 16

B

- brackets, mounting 14
- buzzer status command 35

C

- cables
 - PM10i-10A 15
- changing the default password 24
- circuit breaker
 - PM units with one 79
 - trip time 83
- circuit breakers
 - PM10i-L30A 80
 - PM10-L30A 80

- PM20i-L30A 82
- PM20-L30A 81
- command line interface 31
- commands 32
- configuration
 - default parameters 23
 - initial 24
 - integrated 4
 - restoring the 53
 - saving 25, 53
 - standalone 2, 3
- console 20, 21
 - accessing the 21
 - logging in through the 22
- console access
 - direct 6
 - through a management device 6
- Continental Europe 15, 16
- creating users 24
- current command 35
- currentprotection command 36
- currseg command 37
- Cyclades management device 5
- cycle command 38

D

- daisy chain overview 3, 4
- daisy chaining PMs 2, 19
- DB-9 serial port 21
- default configuration parameters 23
- default password 22
- deleting users accounts 39

deluser command 39

E

electrical and hardware specifications 63

equipment required for installation 13

exit command 41

F

factory_defaults command 41

firmware upgrade 26

flash memory 7

H

hardware configuration options 2

help command 42

HyperTerminal 2, 21

I

In port 3, 20, 21

- connection 21

- logging in through the 22

installation 13

installation environment 17

- air flow 17

- ambient temperature 17

- circuit overloading 17

- grounding 18

- mechanical loading 17

- temperature 17

installation environment 17

integration with Cyclades management products 2

interface pinouts 72

interfaces 7

interval command 46

introduction 1

Ireland 15, 16

K

Kermit 2, 21

L

list command 47

local work station 21

lock command 48

logging in 22

loopback connector 25

M

maximum outlets supported 19

Minicom 2, 21

modular input power cables 14

mounting brackets 14

mounting the PM 18

N

name command 24, 48

naming outlets 24

NEMA 5-20p 16

NEMA 15-20p 16

NEMA 16-20p 16

New Zealand 15, 16

O

off command 49

on command 50

Out port 3, 4, 19

outlet cable package 16

outlet name 24

outlets

- assigning to users 24

- naming 24

- plugging devices into 20

overview, PM 1

P

part numbers 13

passwd command 50

pinouts, In and Out RS-232 serial ports 72

plugging devices into outlets 20

PM10 8

- 15A model 65

- 20A model 65

- L20A model 65

- L30A model 66, 79, 80

PM10i 9, 79

- 10A model 15, 66

- 15A model 16, 67

- 16A model 16, 67

- 20A model 16, 68

- 32A model 9, 68

- 32Au model 10, 68

- L30A model 9, 69, 80

PM20 10

- 20A model 69

- L20A model 69

- L30A 10

- L30A model 70, 81

PM20i 10, 11

- 16A model 16, 70

- 20A model 16, 71

- 32A model 72, 82

- 32Au model 72, 82

- L20A model 71

- L30A model 71, 81, 82

PM20i-32A 11

PM20i-32Au 11

PM45 72

PM8 7

- 15A model 63

- 20A model 64

- L20A model 64

PM8i 8, 79

- 10A model 64

PM8i-15A model 15

port

- console 21

ports

- In 20, 21, 22

- Out 3, 4, 19

power cables

- modular input 14

- PM10i-10A 15

- PM10i-15A 16

- PM20i-16A 16

- PM20i-20A 16

powering on the AlterPath PM 20

R

rack mount diagram 19

rack mounting

- AlterPath PM 16, 18

- holes 18

RAM 7

reboot 51

requirements, system 13

resetting admin password 25

restore command 53

RJ-45 loopback connector 14

RJ-45 serial cable 21

RJ-45 straight-through cable 13

RJ-45 to DB-9F adapter 21

RJ-45 to DB-9F straight-through adapter 13

RJ-45 to RJ-45 7ft. CAT5 cable 13

S

save command 25, 53

save configuration 53

sequential power up 1

shipping box contents 13

software upgrade 26

specifications

- PM10-15A 65

- PM10-20A 65

- PM10i-10A 66

- PM10i-15A 67

- PM10i-16A 67

- PM10i-20A 68

- PM10i-32A 68

- PM10i-32Au 68

- PM10i-L30A 69

- PM10-L20A 65

- PM10-L30A 66

- PM20-20A 69

- PM20i-16A 70

- PM20i-20A 71

- PM20i-32A 72

- PM20i-32Au 72

- PM20i-L20A 71

- PM20i-L30A 71

- PM20-L20A 69

- PM20-L30A 70

- PM8-15A 63

- PM8-20A 64

- PM8i-10A 64

- PM8-L20A 64

- standalone configuration 2, 3

- status command 54

- syslog command 55

- system console, accessing 6

- system requirements 13

T

temperature command 56

terminal emulation program 13, 21

U

unassign command 57

United Kingdom 15, 16

unlock command 57

upgrading PM firmware 26

US 15, 16

USB serial adapter 21

user accounts 2

users

- adding 24

- assigning outlets to 24, 34

- changing passwords of 50

- deleting 39

- unassigning outlets to 57

V

ver command 59

W

wall mounting 17

whoami command 61



Avocent®

The Power of Being There®

For Technical Support:

www.avocent.com/support

Avocent Corporation
4991 Corporate Drive
Huntsville, Alabama 35805-6201 USA
Tel: +1 256 430 4000
Fax: +1 256 430 4031

Avocent Asia Pacific
Singapore Branch Office
100 Tras Street, #15-01
Amara Corporate Tower
Singapore 079027
Tel: +656 227 3773
Fax: +656 223 9155

Avocent Canada
20 Mural Street, Unit 5
Richmond Hill, Ontario
L4B 1K3 Canada
Tel: +1 877 992 9239
Fax: +1 877 524 2985

Avocent International Ltd.
Avocent House, Shannon Free Zone
Shannon, County Clare, Ireland
Tel: +353 61 715 292
Fax: +353 61 471 871

Avocent Germany
Gottlieb-Daimler-Straße 2-4
D-33803 Steinhagen
Germany
Tel: +49 5204 9134 0
Fax: +49 5204 9134 99

590-667-501A